

59.89 mm

Smart Finder User Guide



APP Installation

Scan the QR code with your smartphone or tablet to download the GoFinder app. Alternatively you can search "GoFinder-HL" on App Store or Google Play to get to the respective downloads.

iOS




Android



Pairing

Before pairing, please turn on the Bluetooth of your smart phone.


1. Open the GoFinder app, click "+" icon to add a new smart finder device.
2. Press and hold the button on smart finder for 3 seconds to activate it at the first time. Smart finder will beep twice when activated.
3. Select "HB03" from the list, it will connect to your smart phone automatically.

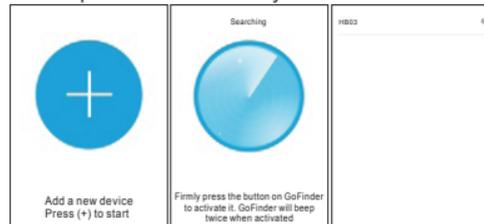

4. You can name your smart finder and add a picture for it by clicking , then click "✓" to save.


Ring Smart Finder

Click the bell icon in the app to ring smart finder which can be attached to your valuable items like keys, wallets, purses, luggage, cameras, bikes, tablets, backpacks, etc.

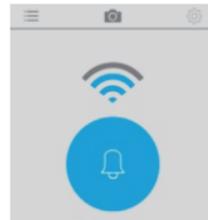

Ring Your Phone

Double-click the button on smart finder to ring your phone. This can help you find your phone in seconds, even if it's on silent mode.

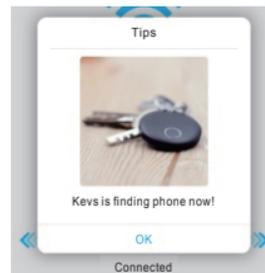

Selfie

Press  to change to the camera mode of your phone, press the button on smart finder to take selfie.




Lost Location

In order to use this feature, you have to activate the GPS on your smartphone. If you lose your smart finder or the object equipped with it, the last lost location will be saved automatically. You can see this location by pressing  within the app.

Setting

In configure important settings for your smart finder, press  within the app.

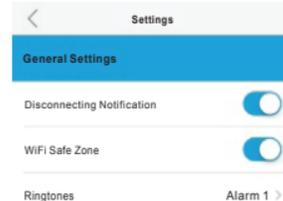

Disconnecting Notification

Toggle on the "Disconnecting Notification", both your phone and smart finder will alarm when it is out of the Bluetooth range. This is to remind you don't leave your things behind.

Toggle off to disable the anti-lost alarm function.

WiFi Safe Zone


WiFi Safe Zone will automatically disable separation alerts when you are connected to a specific WiFi Network, like your home or office WiFi. To enable this function, toggle on the "WiFi Safe Zone", add the WiFi network you would like to have as your safe zone to the list.

Note:

This function only works when the Disconnecting Notification feature is toggled on.

Battery Replacement

1. Open the outer shell with the opening tool provided.
2. Replace CR2016 battery. Please mind the polarity of battery.
3. Close the outer shell.

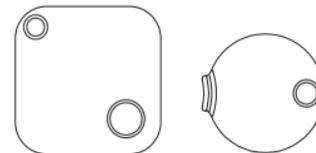

Specification:

Dimensions:	L37mm x W37mm x H6.2mm
Bluetooth Version:	Bluetooth 4.0 (Bluetooth Low Energy)
Range:	0~50meters (in open space)
Buzzer:	85-90dB
Indicator:	Red LED
Battery:	CR2016 button battery X1
Water-proof:	IP66

Compatible Smartphones

iOS (iOS 8.0 or higher)	iPhone: 4S/5/5C/5S/6/6Plus/6S/SE/7/7Plus iPad: 3th Gen/4th Gen/Air/Pro or later iPad Mini or later iPod Touch 5 or later
Android (Android 4.4 or higher)	Samsung Galaxy S4/S5/S6/S7 Galaxy Note 3/4/5/6 Galaxy C5/C7/C9 Galaxy A5/A7/A9 Nexus 4/5/5X/6/6P

Note:

If your smartphone is not on this list but also uses Android 4.4 and Bluetooth 4.0, there is a good chance the smart finder will work fine, but we are not able to offer the same level of support in troubleshooting scenarios.

About Bluetooth Low Energy

This smart finder uses Bluetooth Low Energy (BLE) technology to help you locate your items. While Bluetooth technology is a wireless technology, there are significant differences between Bluetooth, Wi-Fi, and GPS technology. The Bluetooth range of smart finder is up to 50m in open space. Bluetooth is most effective at the 10m range, depending on the environment.

98.00 mm