 


Mi Action Camera Handheld Gimbal User Manual

 
Read this manual carefully before use, and retain it for future reference



1. Package Contents

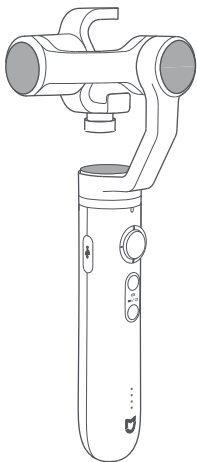

Handheld Gimbal x1




USB Charging Cable x1



User Manual x1

 2. Product Overview

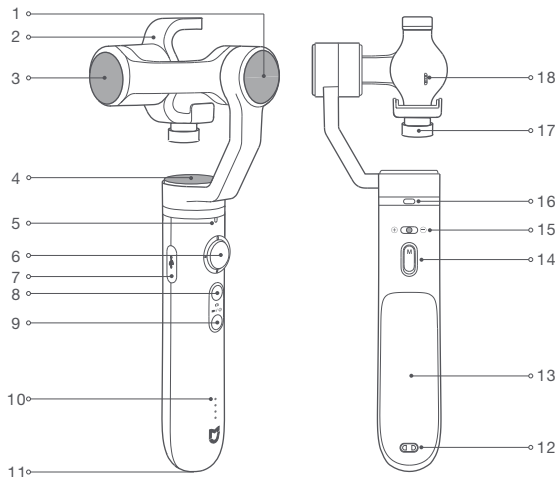


- 1. Roll Axis
- 2. Camera Handle
- 3. Pitch Axis
- 4. Pan Axis
- 5. Status Indicator
- 6. Four-way Joystick

- 7. Charging Port
- 8. Photo Button
- 9. Video/Power Button
- 10. Power Indicator
- 11. 1/4" Screw Hole
- 12. Strap Hole


- 13. Non-slip Pad
- 14. Mode Button
- 15. Toggle Switch
- 16. Locating Slot
- 17. Camera Fastener
- 18. Camera Connector

3. Mounting and Dismounting

 
1. Make sure your Handheld Gimbal is turned off before mounting Mi Action Camera 4K. Insert Mi Action Camera 4K into the camera holder, and turn the fastener clockwise to fix it.
2. Make sure your Handheld Gimbal is turned off before dismounting Mi Action Camera 4K. Turn the fastener counterclockwise until it's loose and remove Mi Action Camera 4K.

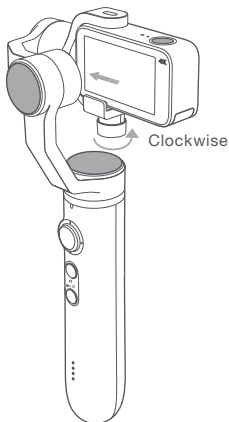

Mounting Mi Action Camera 4K

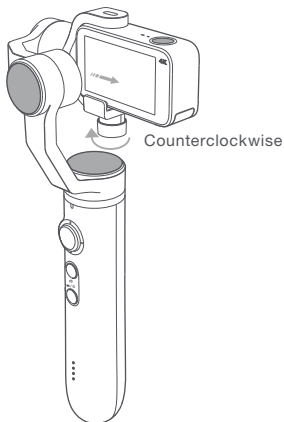 


Dismounting Mi Action Camera 4K


Note:  remove Mi Action Camera 4K until it is powered off.

4. Charging

 Charge your Handheld Gimbal with the provided USB cable or your data cables.



Note:

1. it is recommended to turn off your Handheld Gimbal before recharging. 
2. Fully charge the battery on its first use with a 5V $\overline{\text{---}}$ 2A power adapter. Charging time is approximately 4 hours. 

5. Operating Instructions

 
Make sure that your Mi Action Camera 4K is properly connected to the Handheld Gimbal.

a. Turning on/Turning off

Turning on: press and hold the power button to turn on Mi Action Camera 4K, and the indicator goes on.

Turning off: press and hold the power button to turn off Mi Action Camera 4K, and the indicator goes off.

b. Button Function

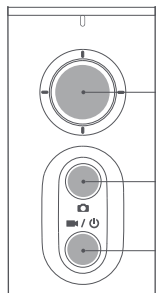

(Front)

Four-way Joystick

Photo Button

Video/Power Button

press to adjust camera angles

 
press to take photos in the current mode

press and hold to turn on/off Mi Action Camera
Handheld Gimbal

press to start shooting video in the current mode

press again to stop shooting video

Note: In the Gallery or Settings page, press photo or video/power button to go back to the Preview page.

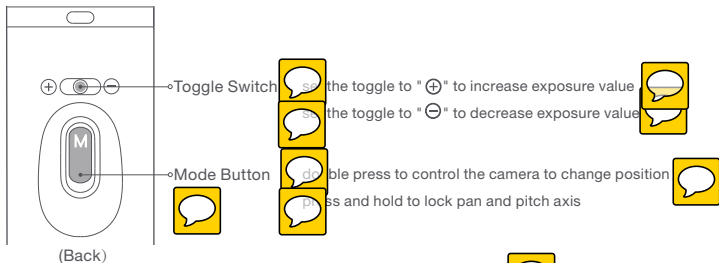

Note: to avoid accidental taps during moving, press and hold photo and mode buttons for 3 secs to enter lock mode. To unlock, press and hold both buttons again for 3 secs.

c. Operating Modes

Vertical mode: when the handle is vertically placed at an angle of more than 30° to the ground, the mode activates automatically

Mode button:

 
double press to return to neutral position

double press to control lens to face the handle


press and hold to lock pan and roll axis

Four-way joystick:

control pan and pitch axis to follow

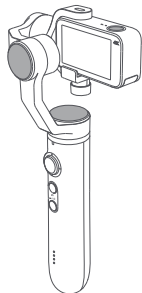

 Horizontal mode: when the vertical handle leans to the left or right at an angle of less than 30° to the ground, the mode activates automatically

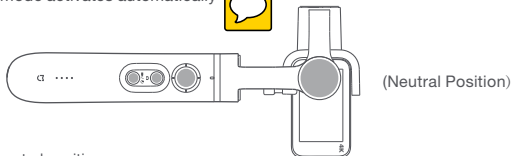

Home button:

double press to restore neutral position



single press to rotate lens counterclockwise by 90°

press and hold to lock roll and pitch axis

Four-way joystick:

control pitch axis to follow



Upside-down mode: when the handle is placed upside down, the mode activates automatically



Home button:

double press to restore neutral position



single press to control lens to face the handle

 
press and hold to lock pan and roll axis

Four-way joystick:


control pan and pitch axis to follow



(Neutral Position)

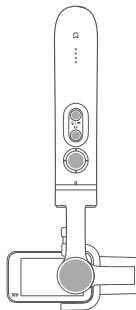

 Flashlight mode: when the vertical handle leans to the front or back at an angle of less than 30° to the ground, flashlight mode activates automatically

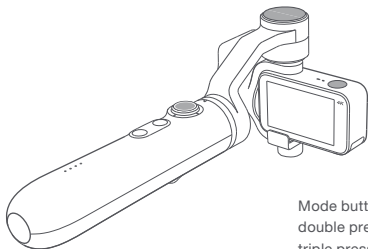

(Neutral Position)

Mode button:

double press to restore neutral position

 
triple press to rotate lens counterclockwise by 90°


press and hold to lock roll and pitch axis

Four-way joystick:

control pitch axis to follow

d. Indicator

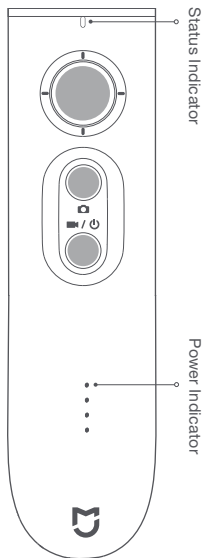

Status	Description
Blue light on	camera properly connected
Blue light blinking	 upgrading
Red light blinking	shooting
Red light on	camera connection error

Status	Description
Lights on one by one	turning on
Lights off one by one	turning off
Lights blinking	charging
Lights off	fully charged

Note: press power button to check current power level



6. Quick Setup

Control your device and interact it with other smart home devices in Mi Home App.

a. Install Mi Home App

Scan the QR code or go to App store to download and install Mi Home app.

b. Add and connect Mi Action Camera 4K



7. Specifications

Name: Mi Action Camera Handheld Gimbal

Model: MJWDQ01FM

Dimensions: 76.5 x 71.0 x 258.0 mm

Weight: 340g (Mi Action Camera excluded)

Precision control: $\pm 0.02^\circ$

Power consumption: 2.5W

Input: 5V/1.8A

Operating temperature: $0^\circ\text{C}\sim 40^\circ\text{C}$

Pitching angle: $-35^\circ\sim +90^\circ$

Panning angle: 360°

8. Precaution

1. Do not use Action Camera Handheld Gimbal when the temperature is below 0°C as battery capacity decreases tremendously in low-temperature conditions.
2. Action Camera Handheld Gimbal features overcurrent protection function. The motor stops working when the device enters overcurrent protection mode, and resumes working after double pressing mode button.



Principal: Xiaomi Communications Co., Ltd.

Manufacturer: Beijing FIMI Technology Co., Ltd.

For further information, please go to <http://www.mi.com/en/>

Address: No.348, Floor 3, 1# Complex Building, Yongtaijiayuan, Qinghe,
Haidian District, Beijing, China



注意 本页为工艺颜色说明，成品印刷中无此页

纸张: 157g京东太空梭

成品尺寸: 110*110mm (公差正负0.5mm)

文字&线条为专色潘通冷灰11C

风琴摺