


Channel Frequency Table

| | | | | | |
|----------|-----|-----|------|-----|-----|
| FR1 B | CH1 | --- | 5865 | --- | MHZ |
| | CH2 | --- | 5845 | --- | MHZ |
| | CH3 | --- | 5825 | --- | MHZ |
| | CH4 | --- | 5805 | --- | MHZ |
| | CH5 | --- | 5785 | --- | MHZ |
| | CH6 | --- | 5765 | --- | MHZ |
| | CH7 | --- | 5745 | --- | MHZ |
| | CH8 | --- | 5725 | --- | MHZ |
| FR2 B | CH1 | --- | 5733 | --- | MHZ |
| | CH2 | --- | 5752 | --- | MHZ |
| | CH3 | --- | 5771 | --- | MHZ |
| | CH4 | --- | 5790 | --- | MHZ |
| | CH5 | --- | 5809 | --- | MHZ |
| | CH6 | --- | 5828 | --- | MHZ |
| | CH7 | --- | 5847 | --- | MHZ |
| | CH8 | --- | 5866 | --- | MHZ |
| FR3 E | CH1 | --- | 5705 | --- | MHZ |
| | CH2 | --- | 5685 | --- | MHZ |
| | CH3 | --- | 5665 | --- | MHZ |
| | CH4 | --- | 5645 | --- | MHZ |
| | CH5 | --- | 5885 | --- | MHZ |
| | CH6 | --- | 5905 | --- | MHZ |
| | CH7 | --- | 5925 | --- | MHZ |
| | CH8 | --- | 5945 | --- | MHZ |
| FR4 F | CH1 | --- | 5740 | --- | MHZ |
| | CH2 | --- | 5760 | --- | MHZ |
| | CH3 | --- | 5780 | --- | MHZ |
| | CH4 | --- | 5800 | --- | MHZ |
| | CH5 | --- | 5820 | --- | MHZ |
| | CH6 | --- | 5840 | --- | MHZ |
| | CH7 | --- | 5860 | --- | MHZ |
| | CH8 | --- | 5880 | --- | MHZ |
| FR5 B | CH1 | --- | 5658 | --- | MHZ |
| | CH2 | --- | 5695 | --- | MHZ |
| | CH3 | --- | 5732 | --- | MHZ |
| | CH4 | --- | 5769 | --- | MHZ |
| | CH5 | --- | 5806 | --- | MHZ |
| | CH6 | --- | 5843 | --- | MHZ |
| | CH7 | --- | 5880 | --- | MHZ |
| | CH8 | --- | 5917 | --- | MHZ |

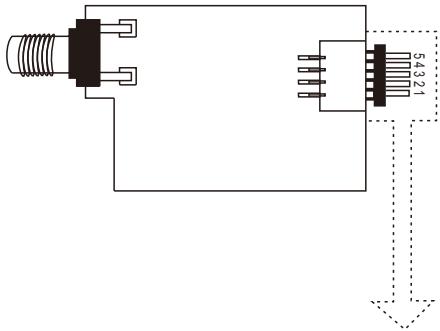

Line 1:VDD_IN(7-24V)
 Line 2:GND
 Line 3:VIDEO_IN
 Line 4:AUDIO_IN
 Line 5:GND

尺寸：71.5*119mm
 正反打印