


Specification:

- Brand name: Eachine
- Item Name: Minicube DSM2/X satellite Receiver
- Frequency range: 2.403-2.479Ghz
- Input power: 3.3V
- Response time: 22ms / 11ms
- Resolution: 1024/2048
- Display method: LED
- Operating voltage: 3.3V
- Working current: 60MA
- Size: 27mm*27mm*7mm
- Weight: 3.1 g
- Antenna length: 100mm
- Data format: Serial port
- Protocol: DSM2/DSMX
- Distance: no ground interference (1 m from the ground) > 300m
- Uses: indoor small aircraft.
- Compatible Transmitters: DSM2 / DSMX series of remote control
- Buzzer integrate

Pin-out diagram:

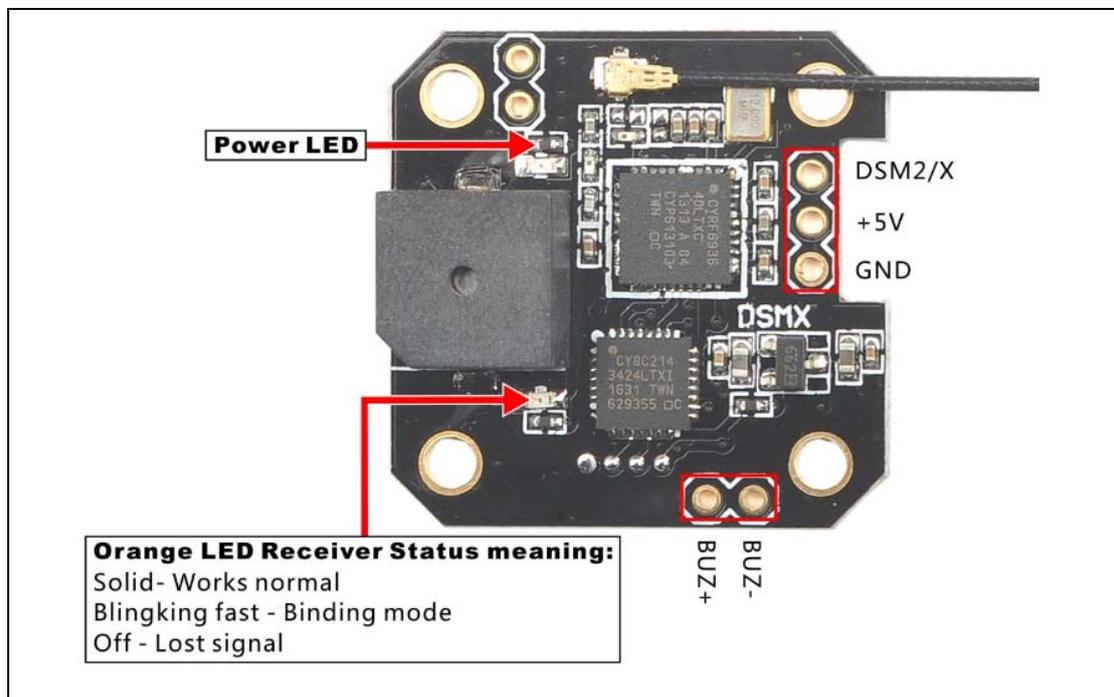

Bind procedure With Minicube F3 flight controller:

- Connect Flight controller to computer and open Cleanflight configurator From CLI tab type: "set spektrum_sat_bind = 9" for DSMX or "set spektrum_sat_bind = 5" for DSM2
- Type "save" and after Flight controller reboot remove USB cable (=Power off the board)
- Wait a second and reconnect the USB cable. After cold start satellite led(Orange color LED) should start blinking and transmitter should be turned on while pressing the bind button
- After binding satellite led should be solid. Connect Betaflight and use receiver tab to test that satellite is working correctly.
- Final step is to go to CLI tab and type "set spektrum_sat_bind = 0" and then type "save". This must be done so that satellite doesn't go back to binding mode when the Flight controller is repowered again.

```
Entering CLI Mode, type 'exit' to return, or 'help'
# Set spektrum_sat_bind=9
spektrum_sat_bind set to 9
# save
For DSMX

Entering CLI Mode, type 'exit' to return, or 'help'
# Set spektrum_sat_bind=5
spektrum_sat_bind set to 5
# save
For DSM2

Entering CLI Mode, type 'exit' to return, or 'help'
# Set spektrum_sat_bind=0
spektrum_sat_bind set to 0
# save
Close Binding
```