

User manual of True wireless earbuds BW-FYE4

Packing lists

BW-FYE4 ×1

3 pairs of Silicone Eartips (size: S/M/L, M pair is already attached.)

User manual*1

Micro USB Charging Cable×1

Product Diagram

Long press

Short press

Microphone

Press for twice

Press for three times

Charging box switch key(front)

Battery case/Storage compartment port

Silicone Ear Caps Selection

For the best audio experience and comfort, please choose the right ear cap size to wear.

Specifications	
Model name	BW-FYE4
Chip	RTL8763BFR
Frenquency Range	2.402-2.480GHz

Support Protocol	HSP/HFP/A2DP/AVRCP	
Transmission Range	10m	
Sensitivity	98dB	
Frequency Response	20~20000Hz	
Charging Input Standard	Touch spot,DC 5V/0.5-1.0A	
Battery Type	3.7V lithium battery (Headsets and Charging Box)	
earbud	Charging Time	About 1.5hours
	Working Time	About 4.5 hours
Electricity supply times of charging box	4	

Charging

Charging the earbuds

Simply put the earbuds into the charging box and close the lid. The indicator light of the earbud is red during charging. When charging is complete the indicator will turn blue and then turn off in 1 minute. The charging box will turn off when the 2 earbuds are fully charged.

Charging the charging box

To charge, connect the USB cable to the BW-FYE4 and a USB power source.

The remain battery is indicated by the the four white lights on the charging box.

Operating Instructions

Power on: Automatically powers on when taken out of the charging box/Long press the Multi-function button for 4 seconds if they are not in the charging box.

Power off: Automatically powers off when placed into the charging box./Long press the Multi-function button for 4 seconds if they are not inthe charging box.

Play/Pause: Short press either of the Multi-function buttons.

Wake up Siri: Long press the Multi-function button of any earbud for 1.5 seconds.

Answer Call: Short press the Multi-function button once when receiving an incoming call

Reject Call: Long press the Multi-function button for 1.5 seconds when receiving an incoming call

Hang up: Short press the Multi-function button once during a call

Next song: Short press the Multi-function button on the earbud for twice.

Previous song: Short press the Multi-function button on the earbud for three times.

Stereo Pairing

1. Take both earbuds out of the charging box. The earbuds will automatically power on. The left earbud will pair to the right earbud automatically. The light of the left earbud will flash red and blue alternately and the right earbud's indicator light remains off.

2. The right earbud “BW-FYE4 ” is the earbud you need to pair your device to for stereo sound. Activate Bluetooth mode on your device, search for nearby devices, and then pair to “BW-FYE4.”

Mono Pairing

If you only want to use one earbud, take out the L or R earbud and Bluetooth pair your device to the corresponding side, “BW-FYE4” or “BW-FYE4 R” .

Troubleshooting

The earbud won't pair with my device.

1) Confirm that the earbuds are powered on. If they are not powered on, put them back into the charging box and take them out again.

2) Confirm that the earbuds are in pairing mode.

In stereo mode, the indicator light of the left earbud flashes red and blue alternately, and the indicator light of the left earbud flashes blue slowly.

In mono mode, the indicator of the earbud flashes red and blue alternately. If not in pairing mode, please check whether the earbud has

automatically paired to another device. If it is paired to another device, turn Bluetooth mode off or unpair the “BW-FYE4 /R” from the already paired device.

3) Confirm that the earbud is within the range of 10 meters.

Sound is only playing from one earbud in stereo mode.

1) Check that both earbuds have battery power remaining.

2) Long press to power off both earbuds. Then long press to power on both the earbuds simultaneously. Hold the Multi-function button until you hear a second audible tone. The process takes about 20s and completely clears the pairing list. Then, put the earbuds back into the charging box, and try the pairing process again. If there are any other signal abnormalities, do as above to reset the earbuds.



Correct disposal of this product

(Waste Electrical & Electronic Equipment) This Marking indicates that it should not be disposed with other household wastes or commercial wastes. To prevent possible harm to the environment or human health, please separate this from other types of wastes and recycle it.