
Thank you very much for purchasing WIFI version curtain switch controller series product produced by our company, in order to make our products serve better for your life, please read this manual carefully before using, and keep it for future reference.

1、 specification:

Applicable products: incandescent, energy saving lamps, fluorescent lamps, LED lamps and other lighting

Operating voltage: AC100 - 240V, 50 / 60HZ Load power: $\leq 1000W$ / Road Standby power consumption: $\leq 0.5 W$ Working temperature: 0 °C ~ 80 °C Relative humidity: 10% to 93% (non-condensing) Control: Touch, a mobile control Wiring method: zero, FireWire

2, the wiring diagram:

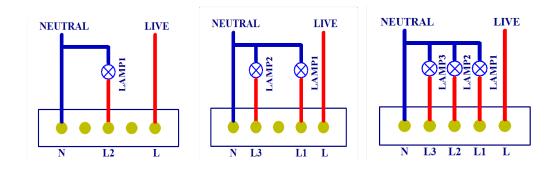

A switch wiring diagram

2switch wiring diagram

3 switch wiring diagram

3, the manual operation:

(1)sweep on the swith panel, The key indicator light is blue, then the switch is off (that is, turn off); button indicator light is red, then the switch is closed (that is, turn on the lights).
4、 the mobile operating: (divided into local and remote control modes when the phone and the switch in the same network as the wireless LAN control when the phone network operators outside the network, compared with remote control NOTE: When you add a device need to use the phone through wireless router network)

①Install mobile APP (search keyword: "intelligent life" or sweep




(2) mobile phone register (as shown)

ଳା MCC4G ବ୍ଲ ← LOG IN	09:56 të 92% 💻							
Region	China +86							
Click	Mobile number/E-mail Click here to go Passwto the next step •							
	Log in							
Sign in with SMS	Forgot password							
Sign in wi								
WeC	ihat QQ							

fil CMCC4G	ମା CMCC4G 🕾 ··· 09:56 ଅ 92% 🖿								
←	← SMS VERIFY AND SIGN IN 1:Click here to go								
	to the next step								
Regio	Region China +86 >								
Phon	Phone Number								
Verifie	cation Code		Ge	at 🔪 🚽					
	Login 2:Click to get the verification code								
				$\stackrel{=}{\lhd}$					
+	1	2	3	$\langle \times \rangle$					
-	4	5	6						
· · · · · · · · · · · · · · · · · · ·	7	8	9	下个					
;	*	0	#	Ĵ					

③add the switch device (as shown) the switch required normal power)

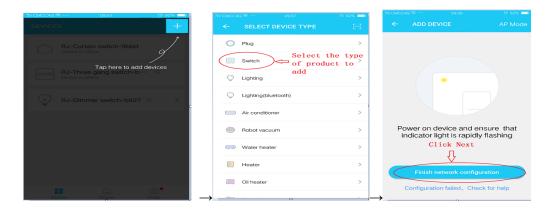

④set up the work WIFI for device (as shown)

511 CMCC40 Cancel		04	:58		13 92% 페			
Enter Wi-Fi password 2:Enter password for wireless router 1:This will utomaticality identify Office Nettor This app is supported only on 2.4GHz Wi-Fi channels								
ŵ		Q	<i></i>	0	₽			
ab	,	•	?	L	\bigotimes			

⑤automatically added process

(as shown)

#ILCMCC4G ♥ …	09:59	U 92% 🔲
Cancel		
-		
Wall C		
mamai		
C	onnecting now	
(11%	
	suré your phone and de	
	lose to your router as p	ossible.
0	Searching for device Registering device to the	cloud
Y Y	Initializing your device	
U Charles of	me hundred	

6 successfully completed the above steps to add the product to operate

 \bigcirc other functions

a) naming device, removed (as shown)

SILCMCC4G	ন্ন 10:04	C 91% 🔜)	///CMCC4G ♥ 10	0.04 🗢 91% 💷)	5	I CMCC4G 🕾 …	10:06	U 90% 💷	51	CMCC4G 🕾	10:07	U 90% 🖬
← P												i E
		Û										
		1	Modify Device NameRJ	-Three gang switch-9a71 >								
			Device Sharing									
	•											
			Device Info	1								
			Feedback			(
	Switch 1 d			/						Device remove		
		, i i	Oheck for Firmware Up	xdate >			WO					
							\smile				CO	NFIRM
	し) (し		Remov	e Device								
			Restore Ma	facture Defaults		¢ 📼	⊈ d>	⊙ ₹				
	Switch 2 & Switch 3	3.42	Click 1 to p	oop up the 2	Ē	qwer		i i o p		Switch 2 &	Switch	3.4
			feature opti	on		q w e r	tyι	гор				
						a s d	fah	j k l				
	I open Timer All ci					☆ z x	c v b	n m 🗵		All open		FF)
A	Topen Timer Aircs		→	-	\rightarrow		ن_اا		\rightarrow	va open	All i	DOSE

b) scenes Editing (as shown)



5, manually reset the device

(1) Reset light switch 、 light curtain controller and other equipments

O Press any key of the device for 15 seconds untill light flashes indicating a successful reset;

O indicator light flash quickly (flash 2 times every second) indicating fast mode;

O indicator light flash slowly (1 flash every 3 seconds) indicating hotspot mode;

O under fast mode, press any device key for 15 seconds until the indicator flashes slowly, indicating it has switched to focus mode; and vice versa.

②Reset the dimmer switch

O In the dimmer switch off long press down key for 15 seconds until light flashes, indicating a successful reset;

O indicator lights flash quickly (2 times flash every second) indicating fast mode;

O indicator lights flash slowly (1 flash every 3 seconds) indicating hotspot mode;

O under fast mode, press and hold down the device key for 15 seconds until the indicator flashes slowly, indicating that it has switched to focus mode; and vice versa.

6, the light switch accessories:

light switch Instructions 1 piece

Warranty card 1 piece

the screws 2 pieces

The above accessories are subject to change without prior notice. If you have any questions, please contact your local dealer or contact us