

Minimum RC

 
 
 
Sopwith Camel Assembly Instruction

 
 
 
 


Precautions:


- When using foam glue, apply the glue to the bonding surface, dry for 1-2 minutes before bounding the parts.
- When parts are difficult to remove, use tool to cut it out.

Part distribution

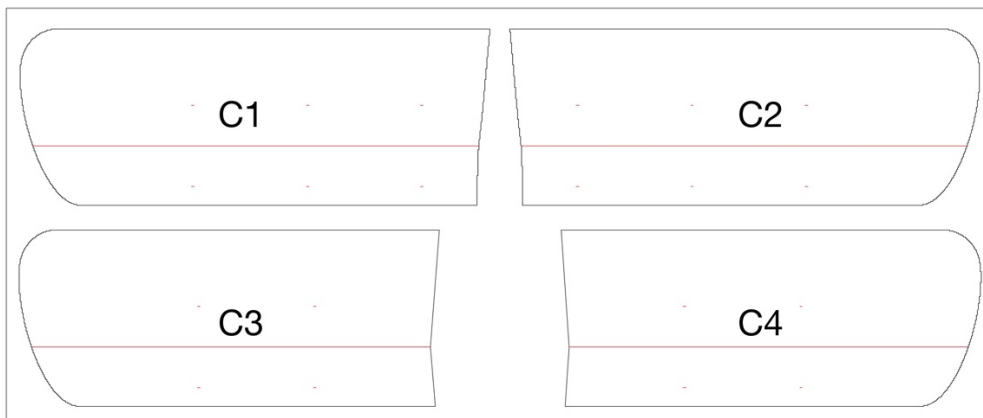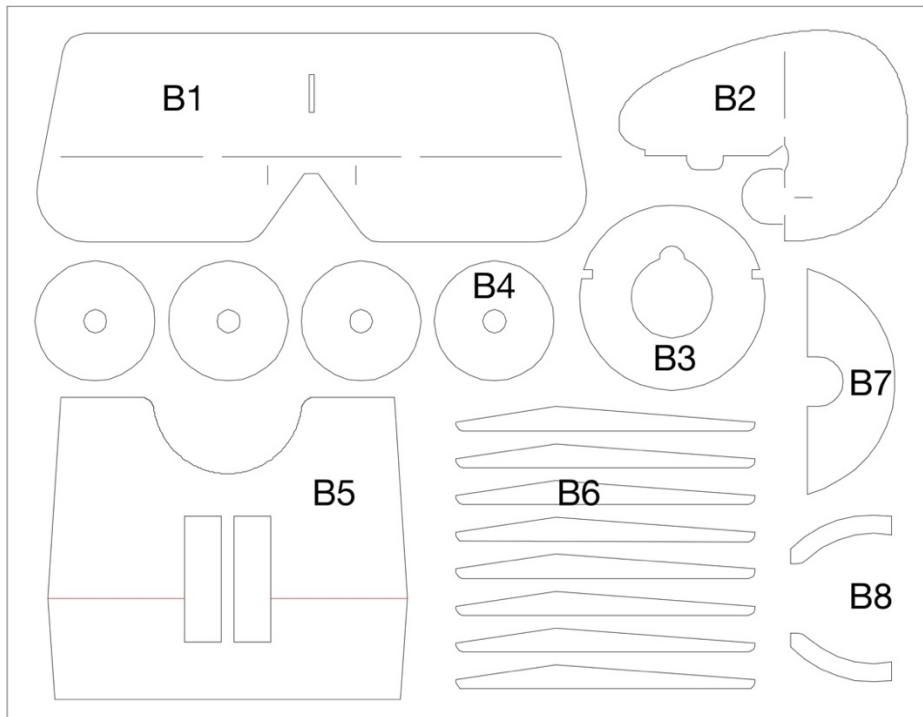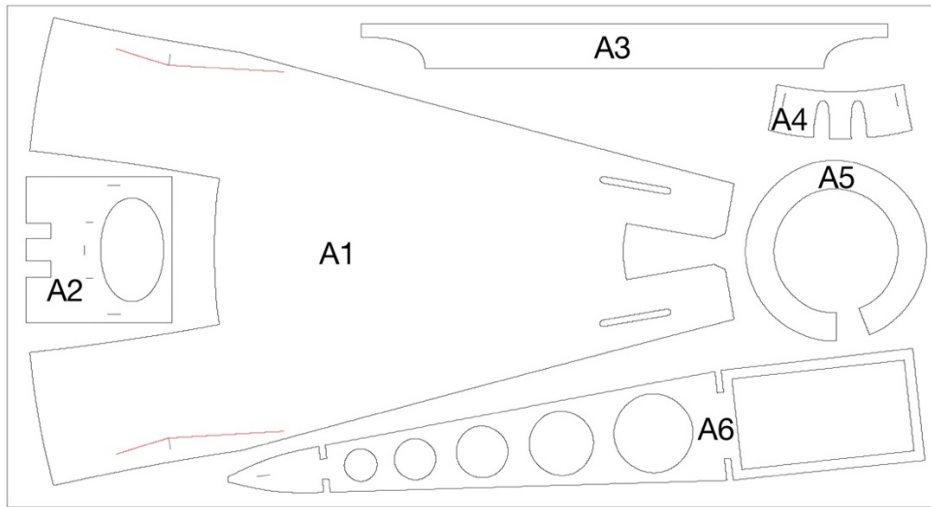


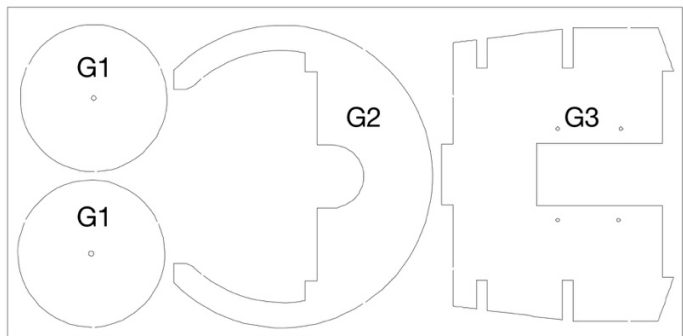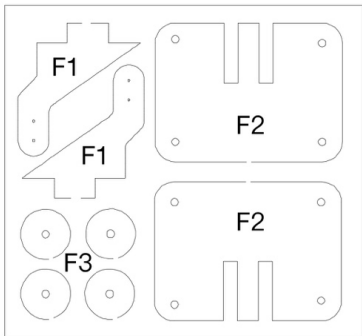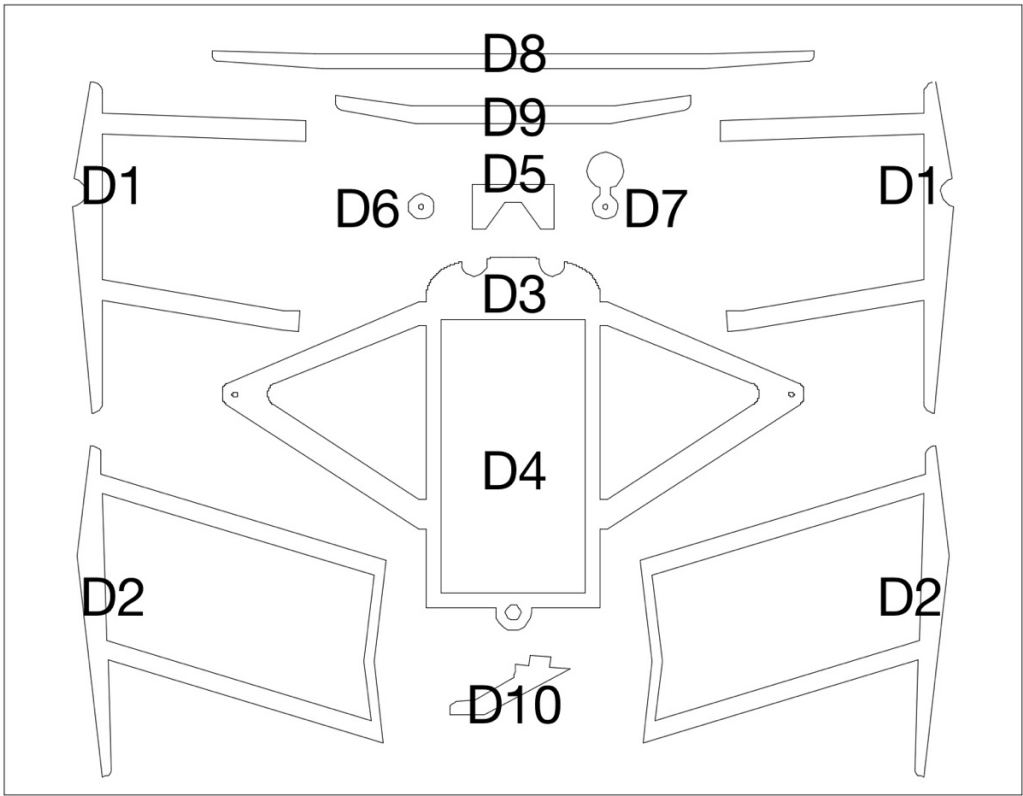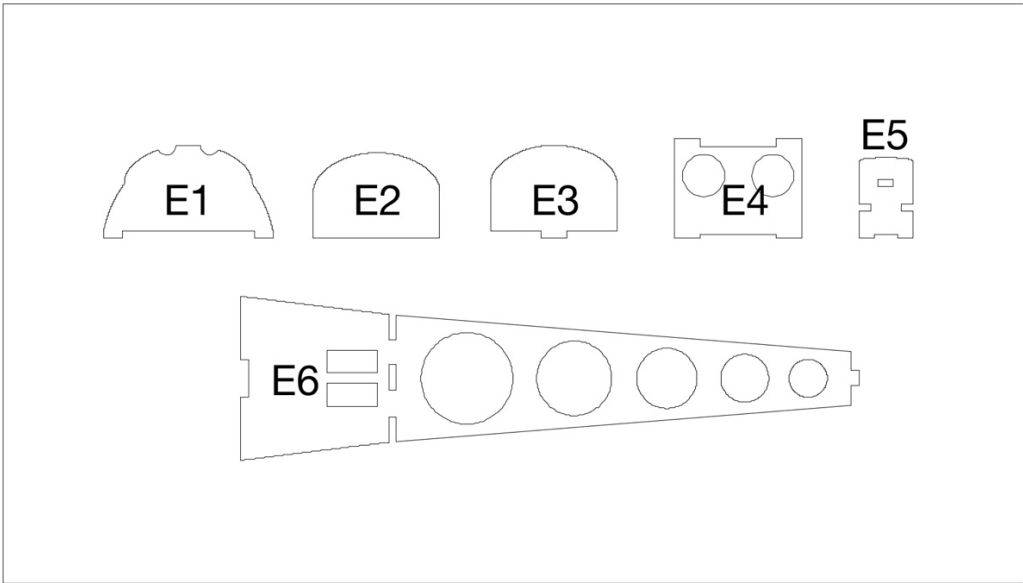

 
1.

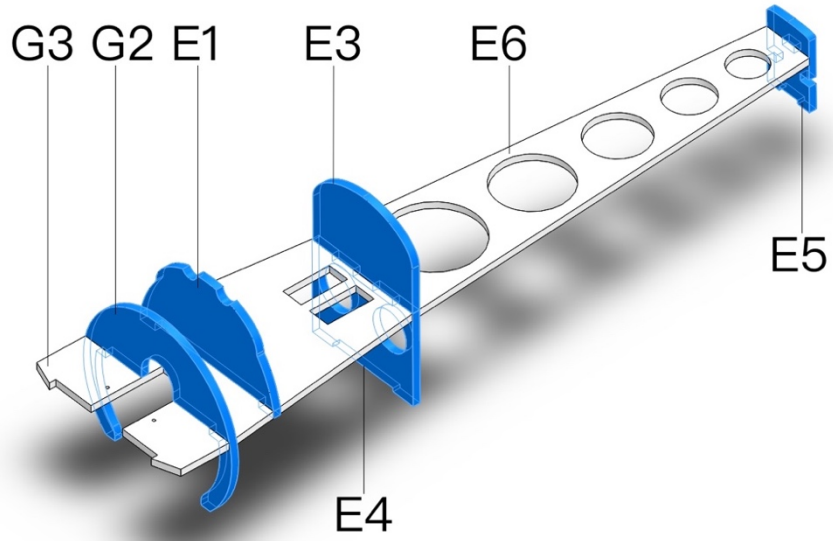

 
2. Apply cockpit interior stickers

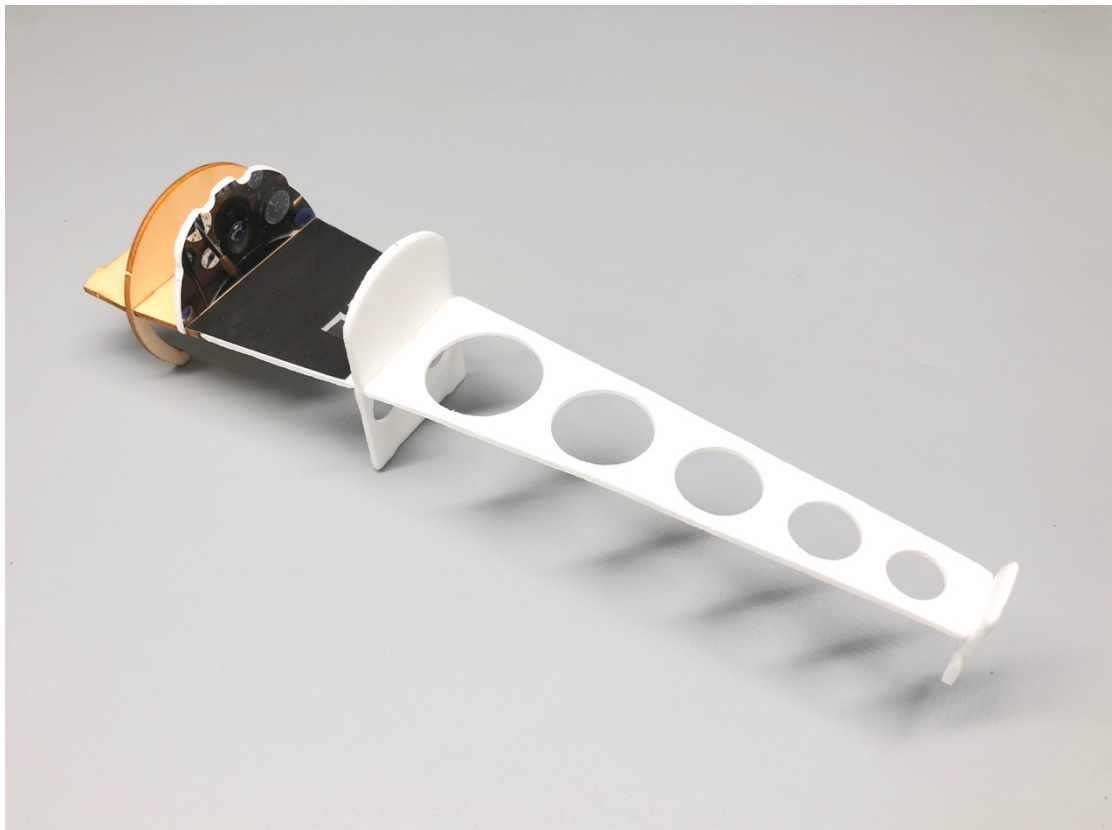


 
3. Pre-bend the skin before installation and check the position match.

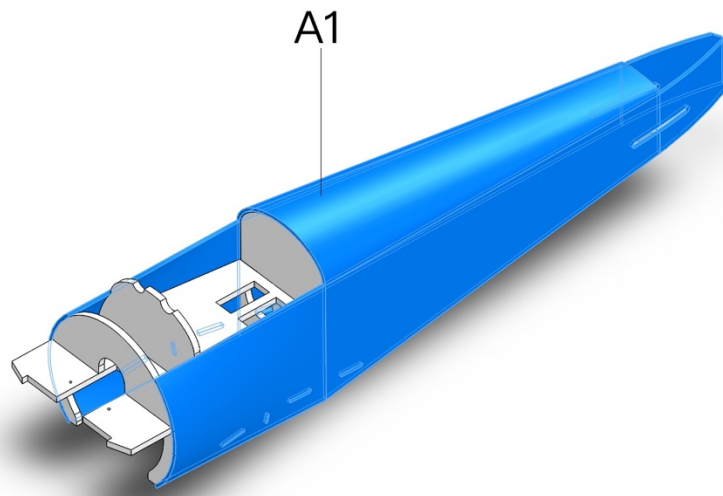

 
4.

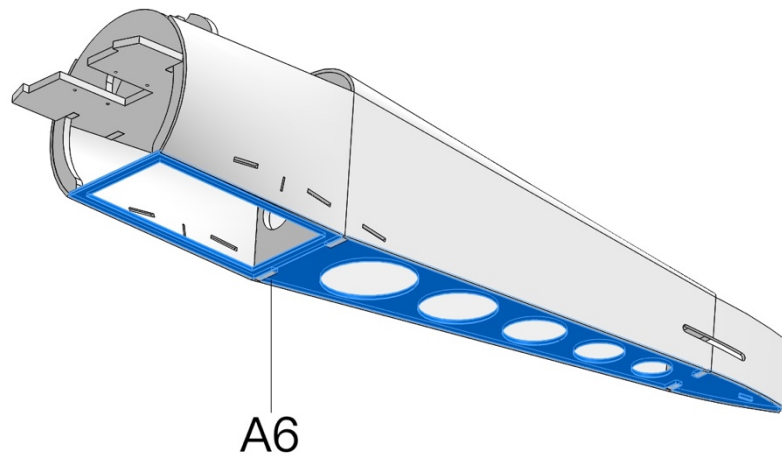

  
5.

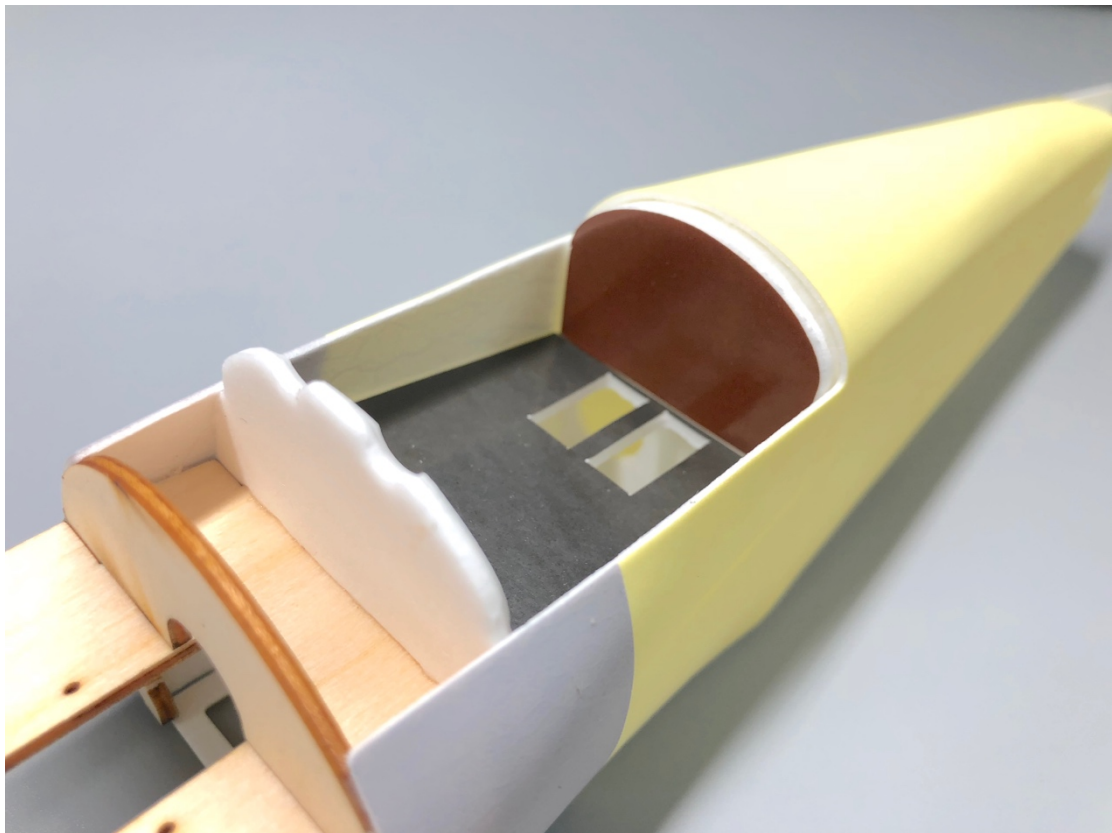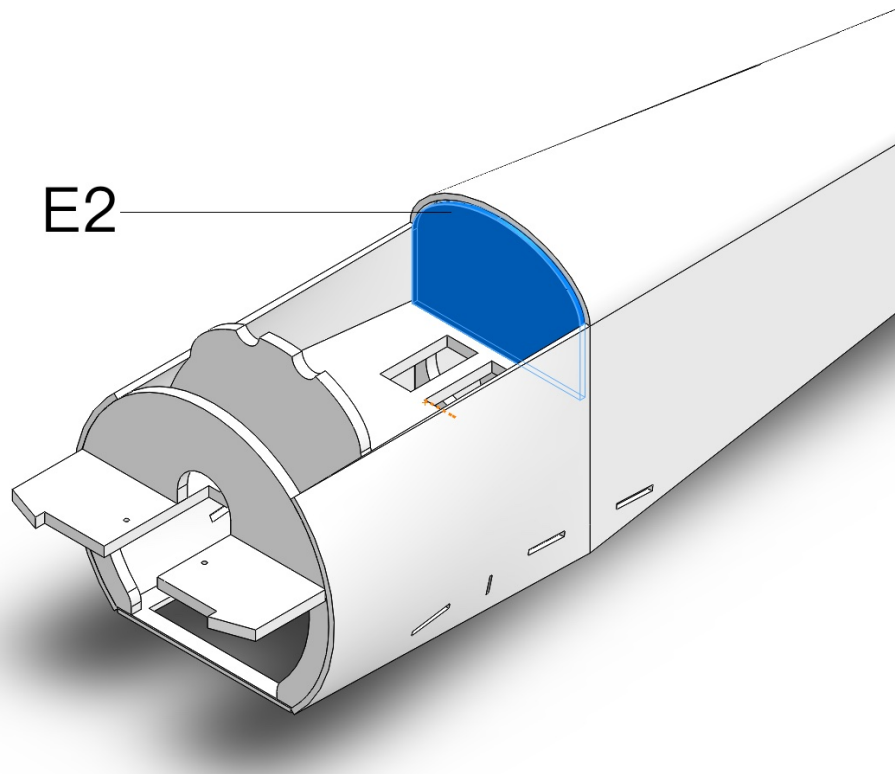

 
6. Pre-bend the skin before installation and check the position match.

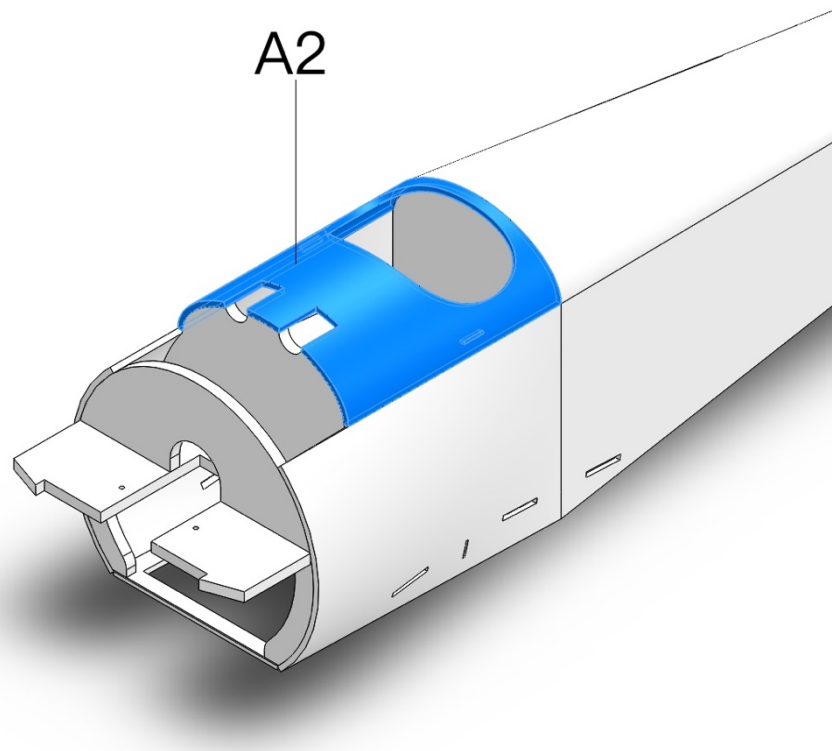

 
7.

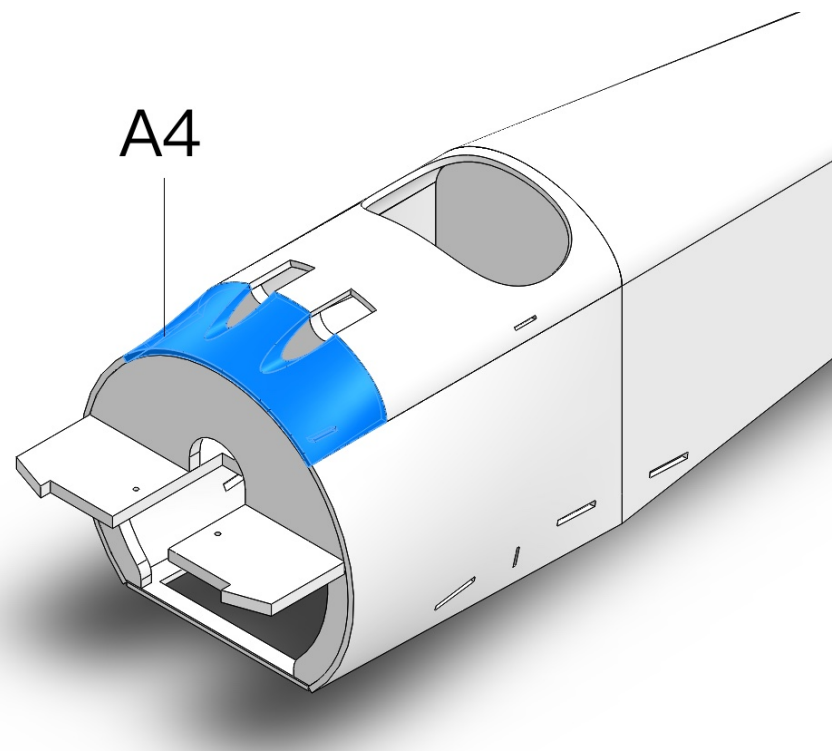


 8.

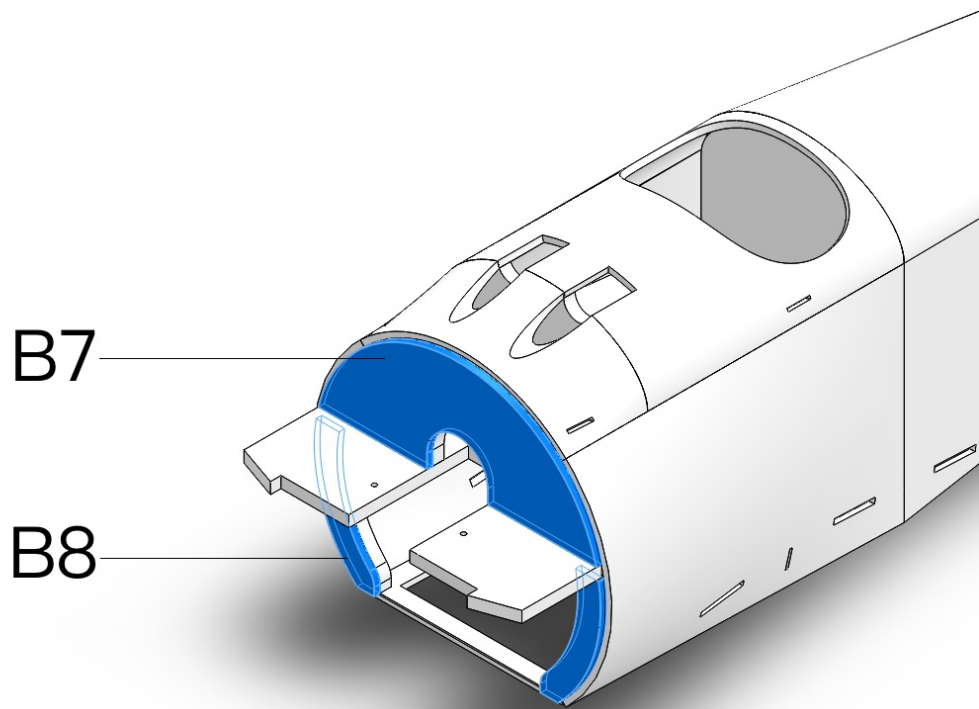


  9. Pre-bend the skin before installation and check the position match.

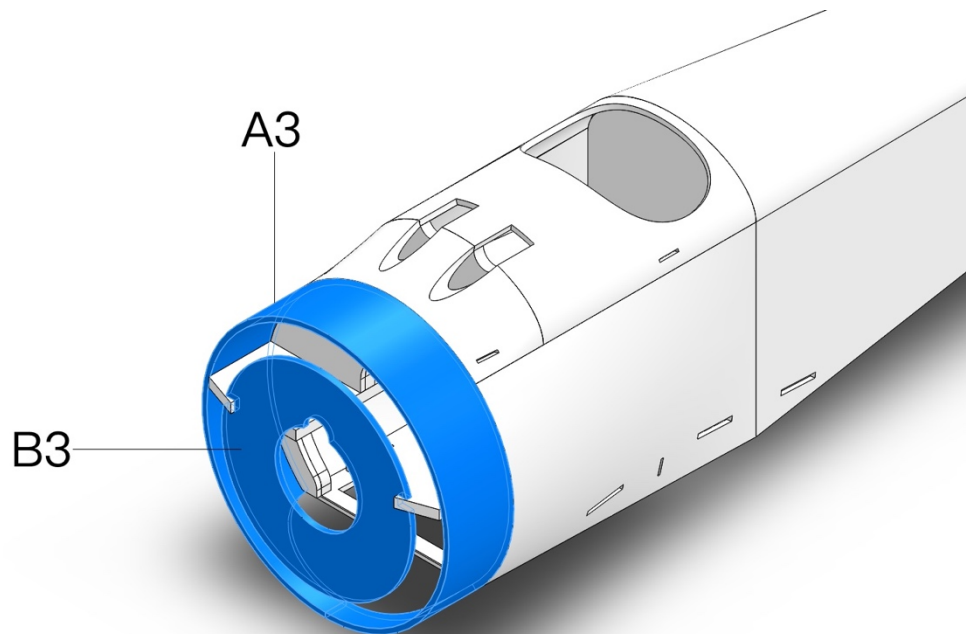


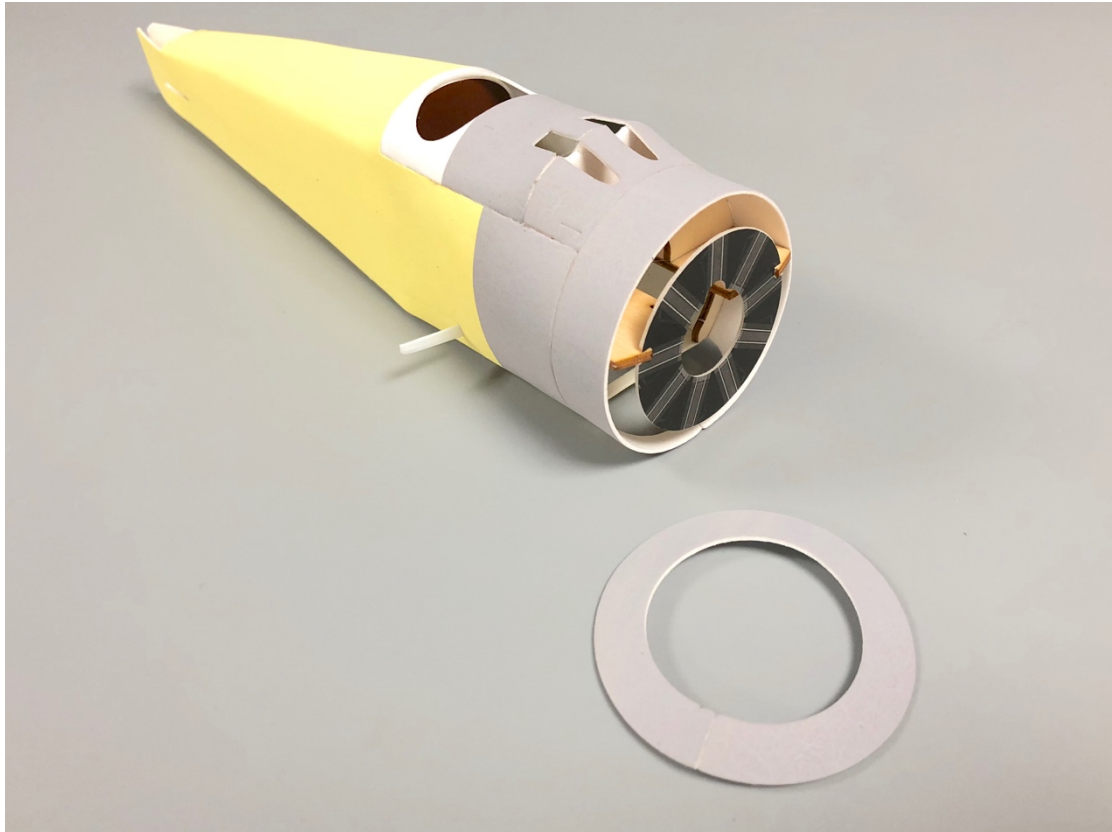

 
10.

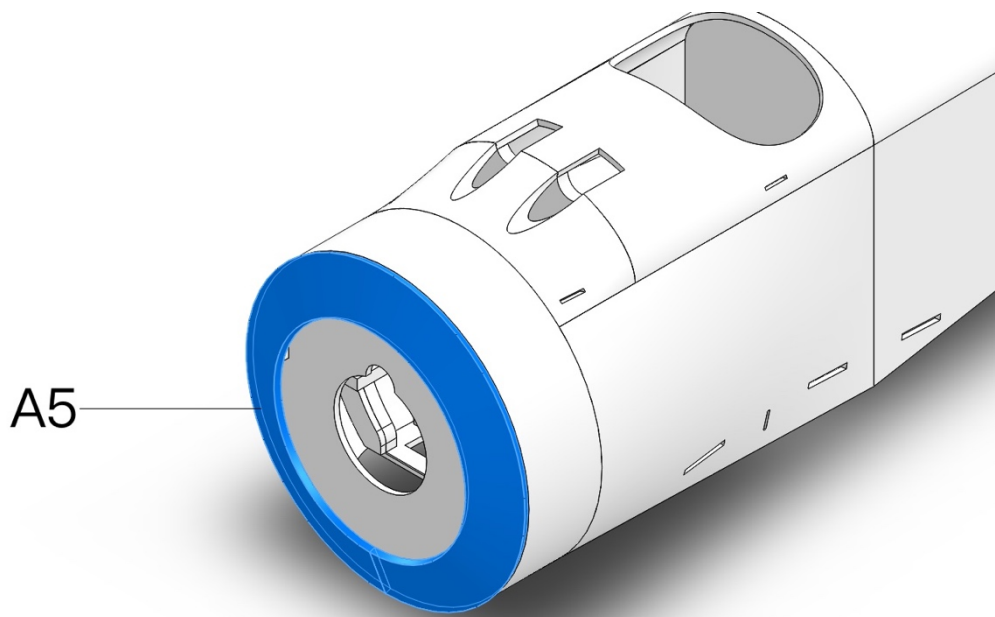

 
11.

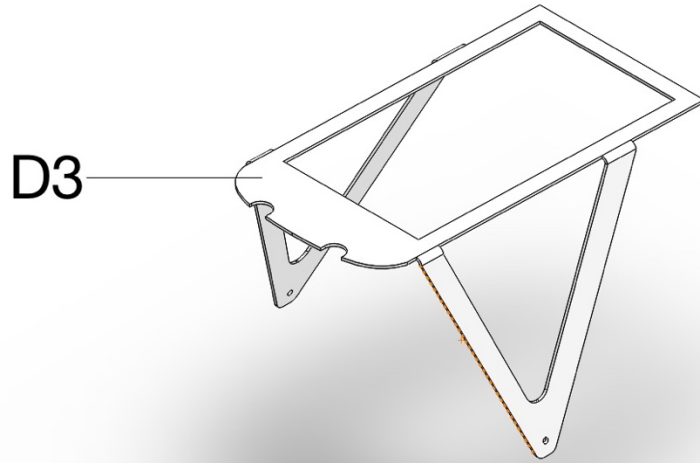

 
12.

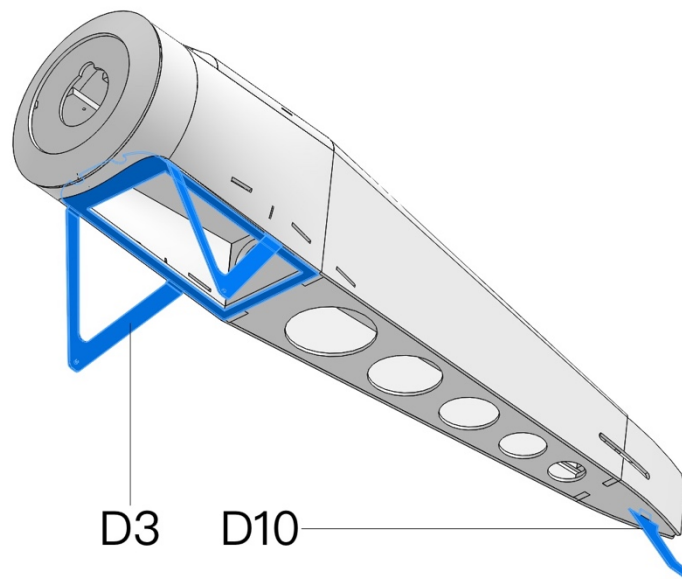

 
13.

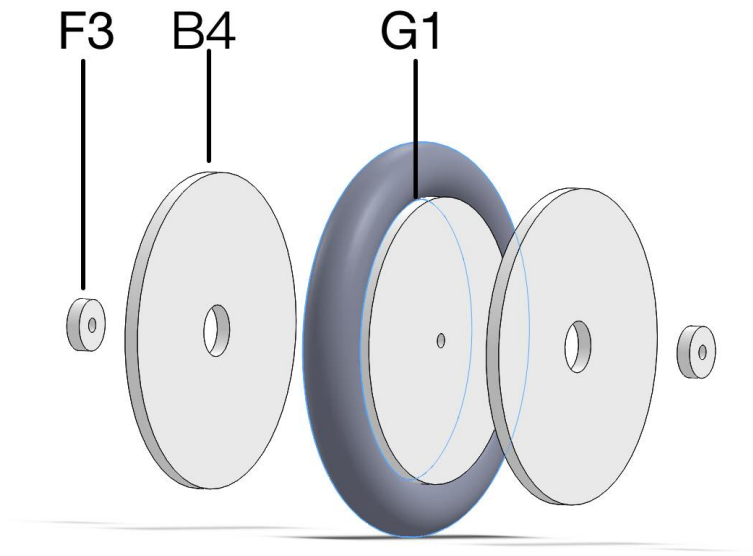

 
14.

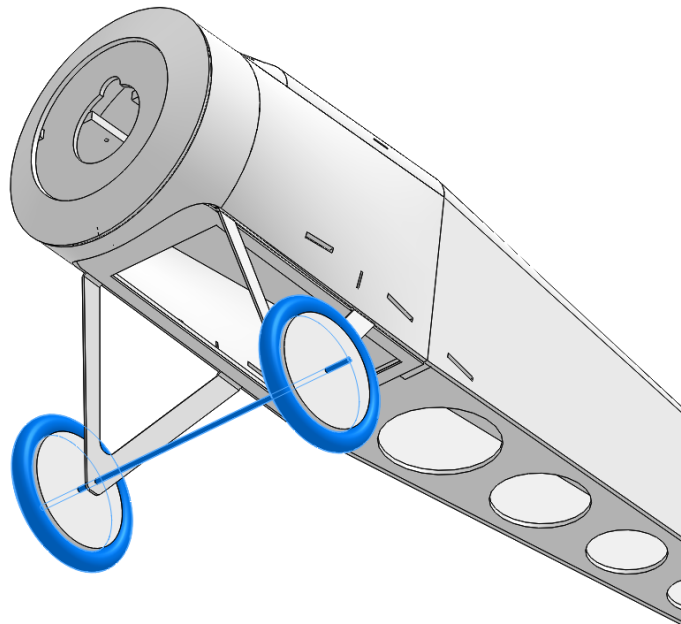


 
15.

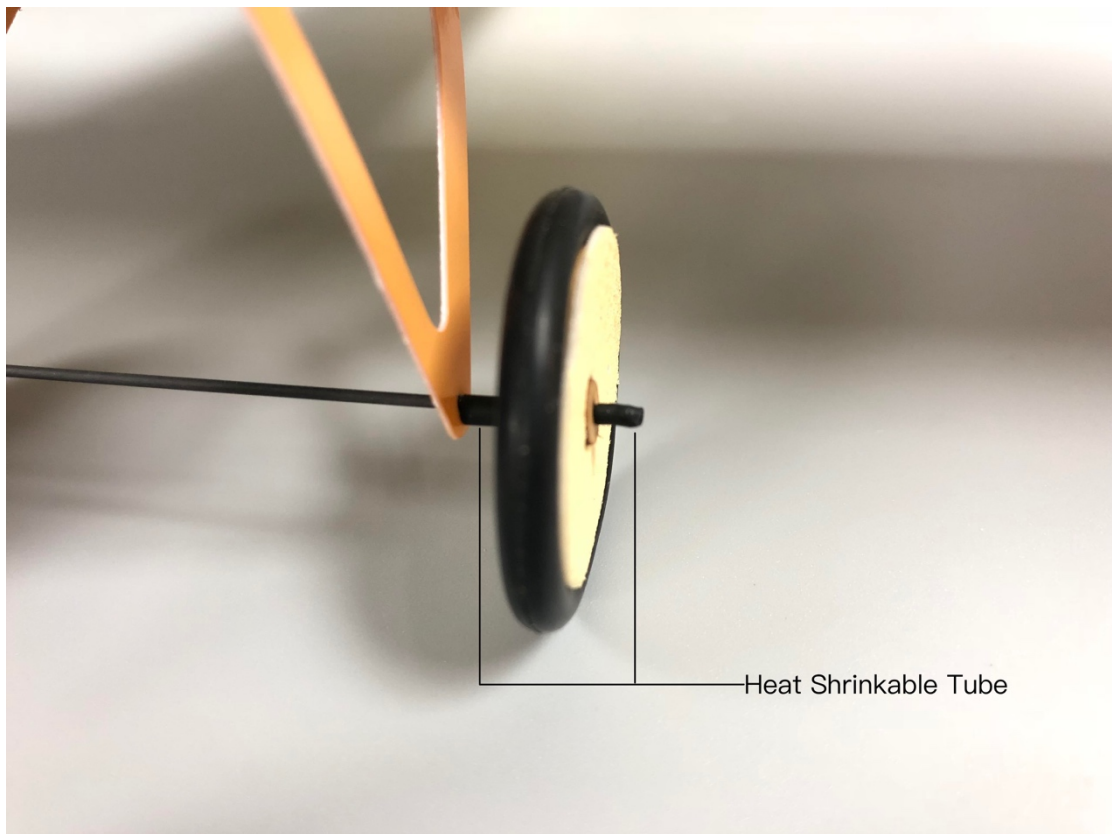

 
16. Bend the bottom of the wing support at a width of 3mm.

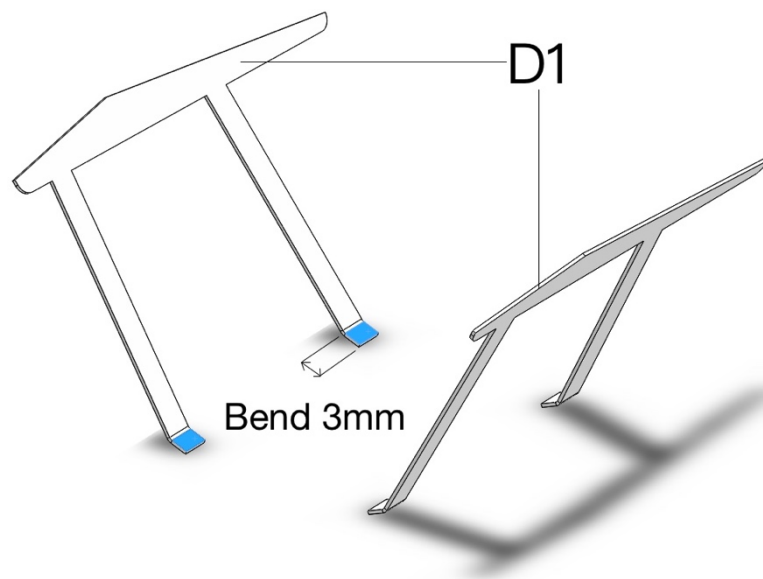

  
17. Paste the cockpit exterior sticker before installing the wing support.

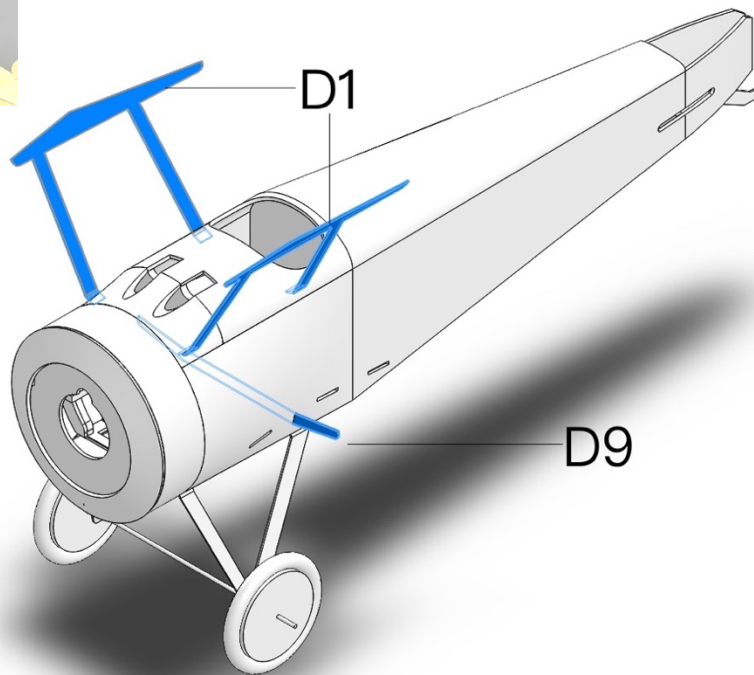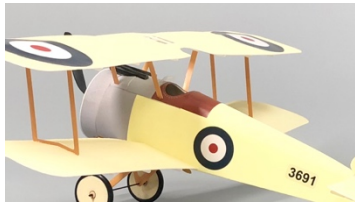

 18.

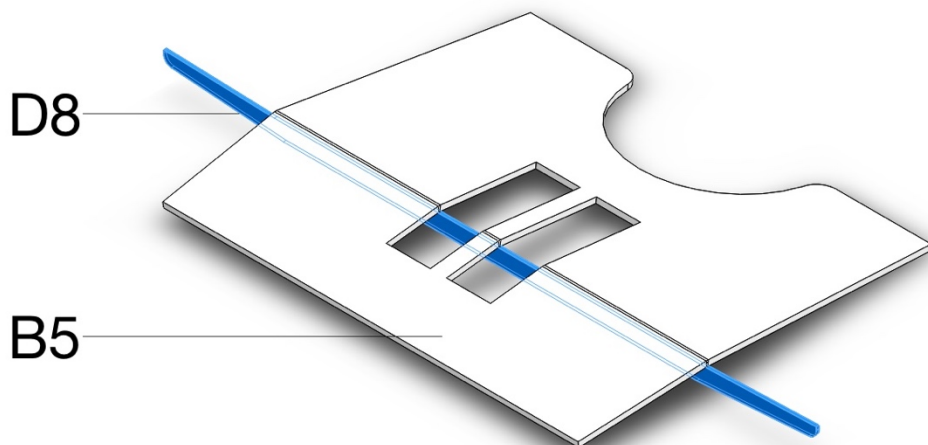

 
19.

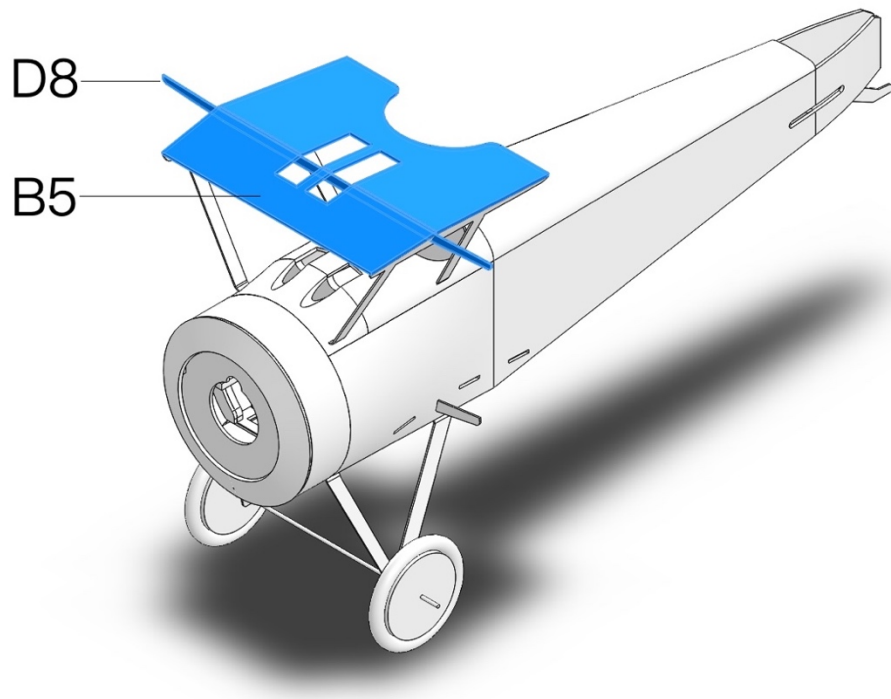


20. Paste horizontal tail reinforcement.



 21 .

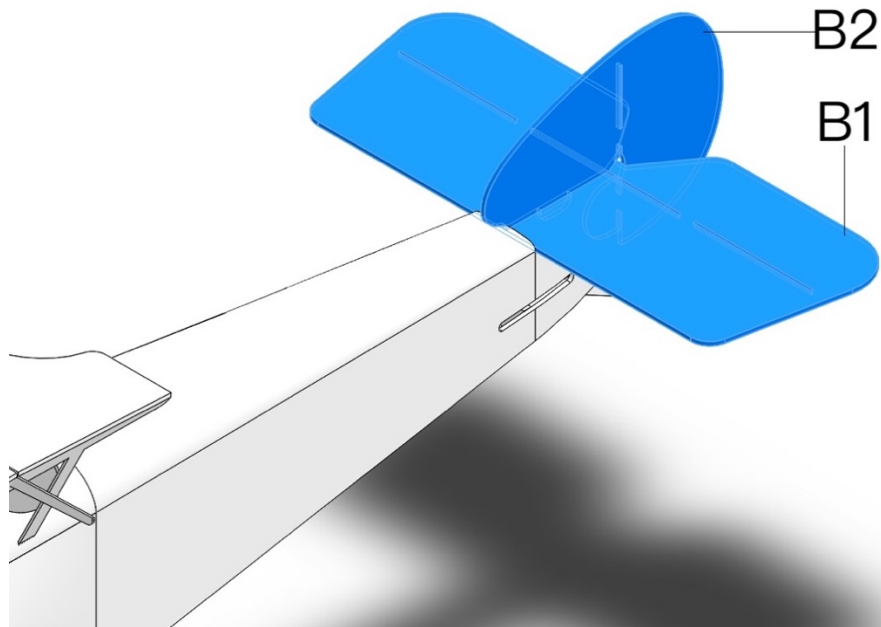

 
22. Carve a crease at a distance of 20 mm from the leading edge of the wing

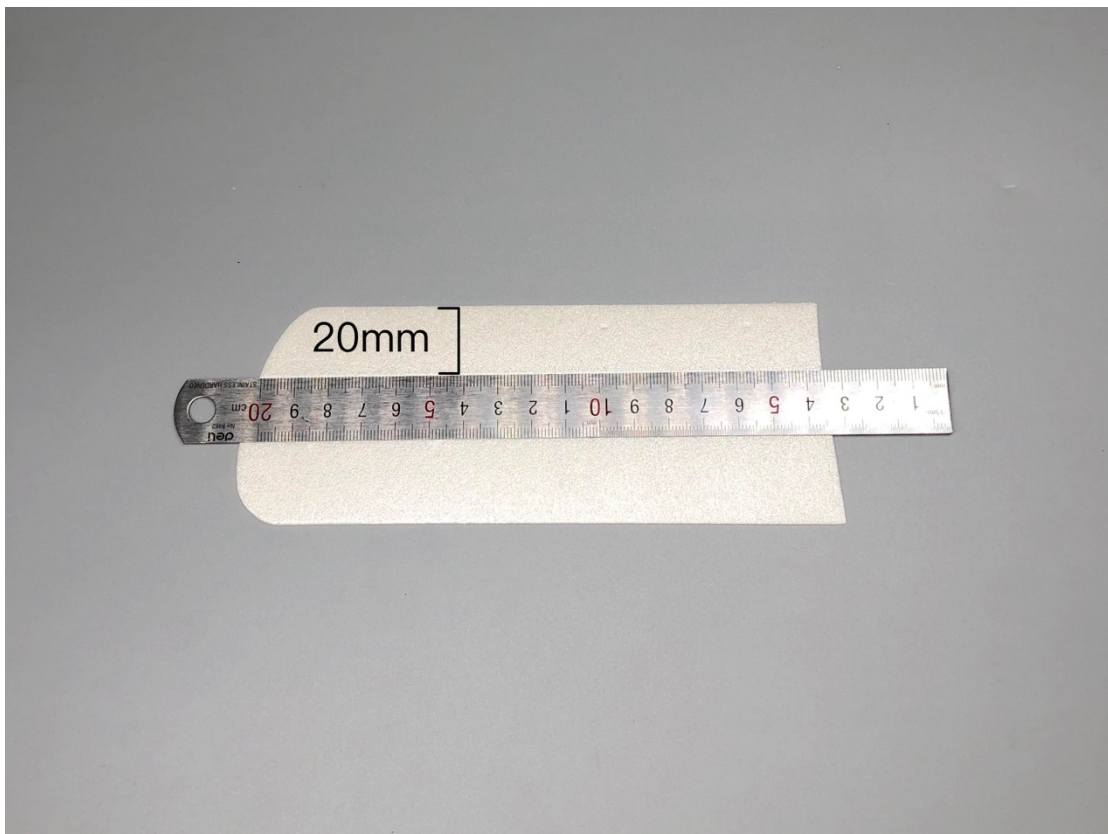




 23. Paste wing reinforcement sticker




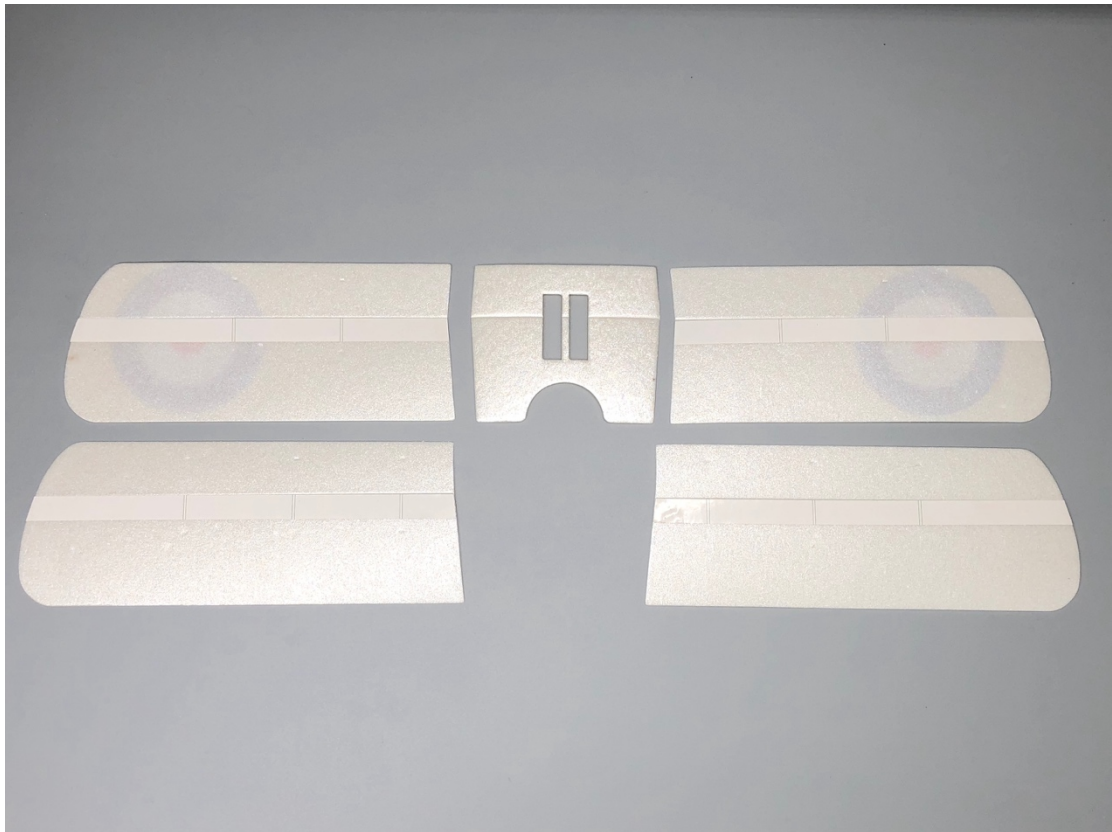

 
24. Install the ribs. Please note: there are no ribs on the outermost side of the wing.

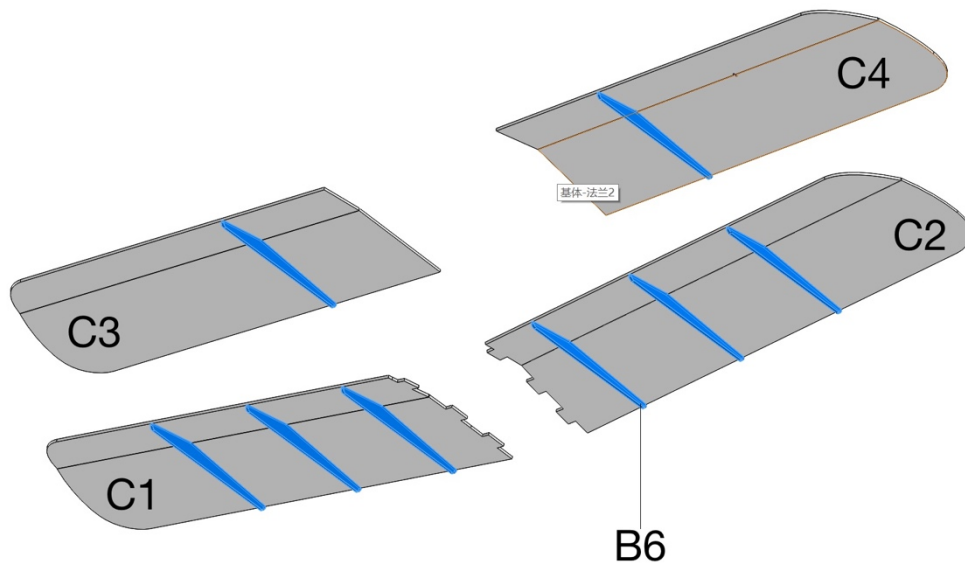

 
25. The side of the fuselage has an indentation corresponding to the wing installation position.

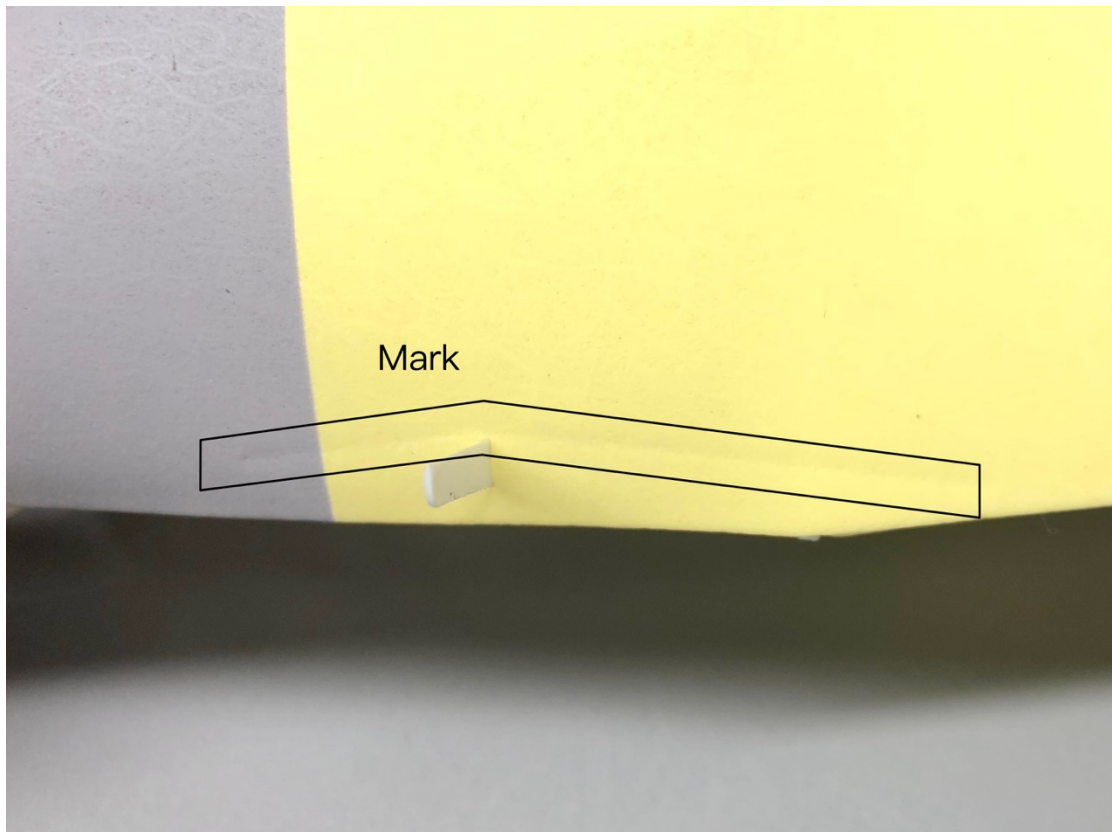

 
26.

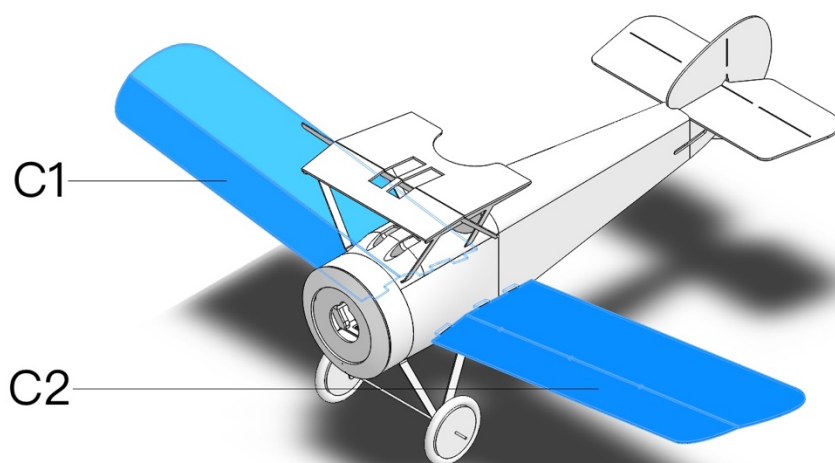

 
27.

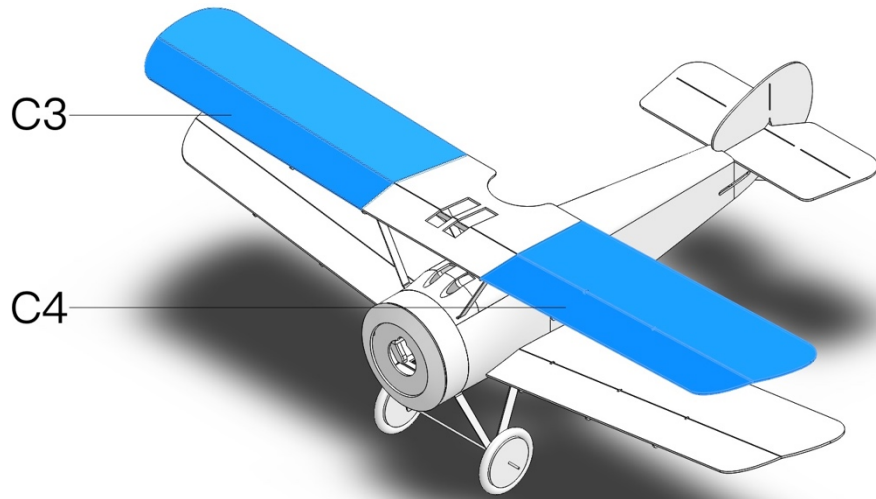

 
28.

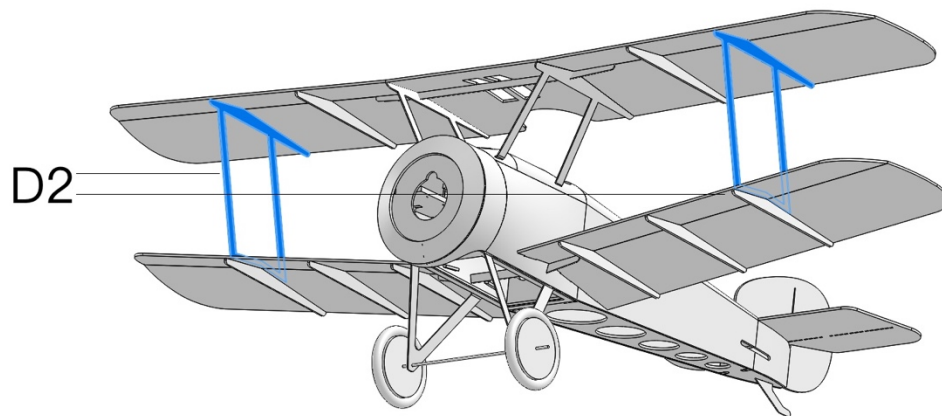

 
29.

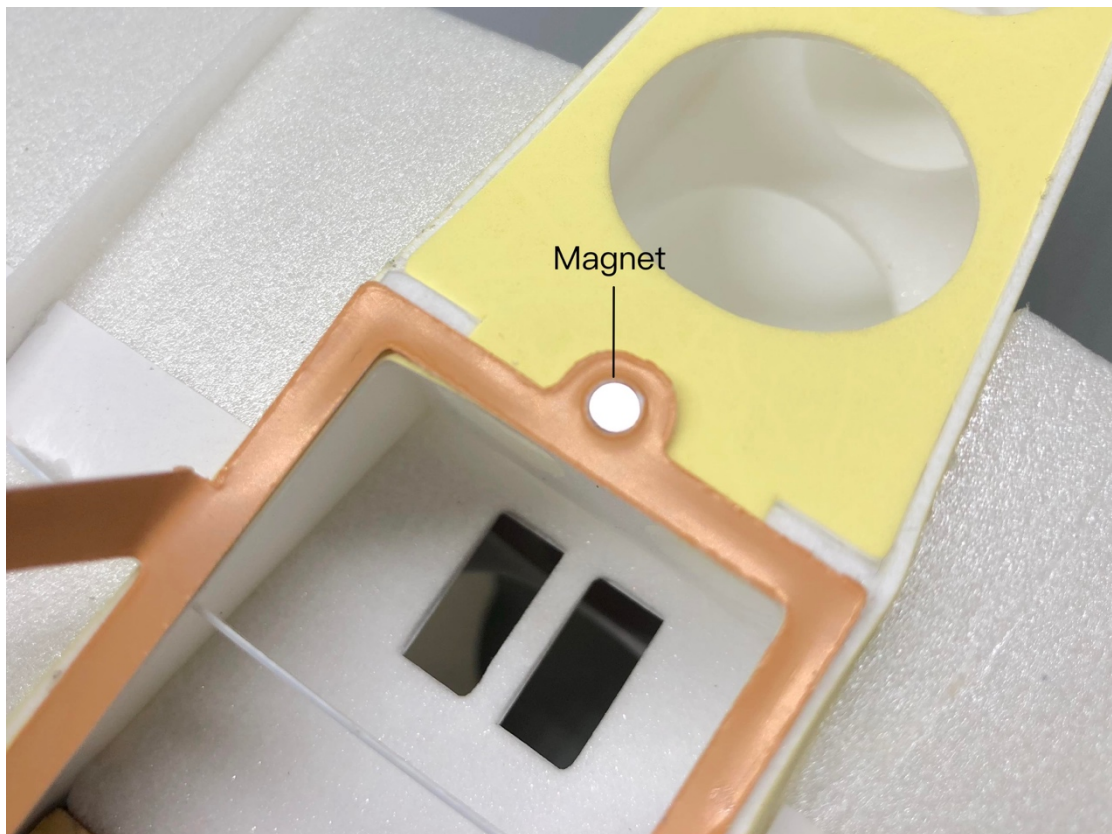

 
30.

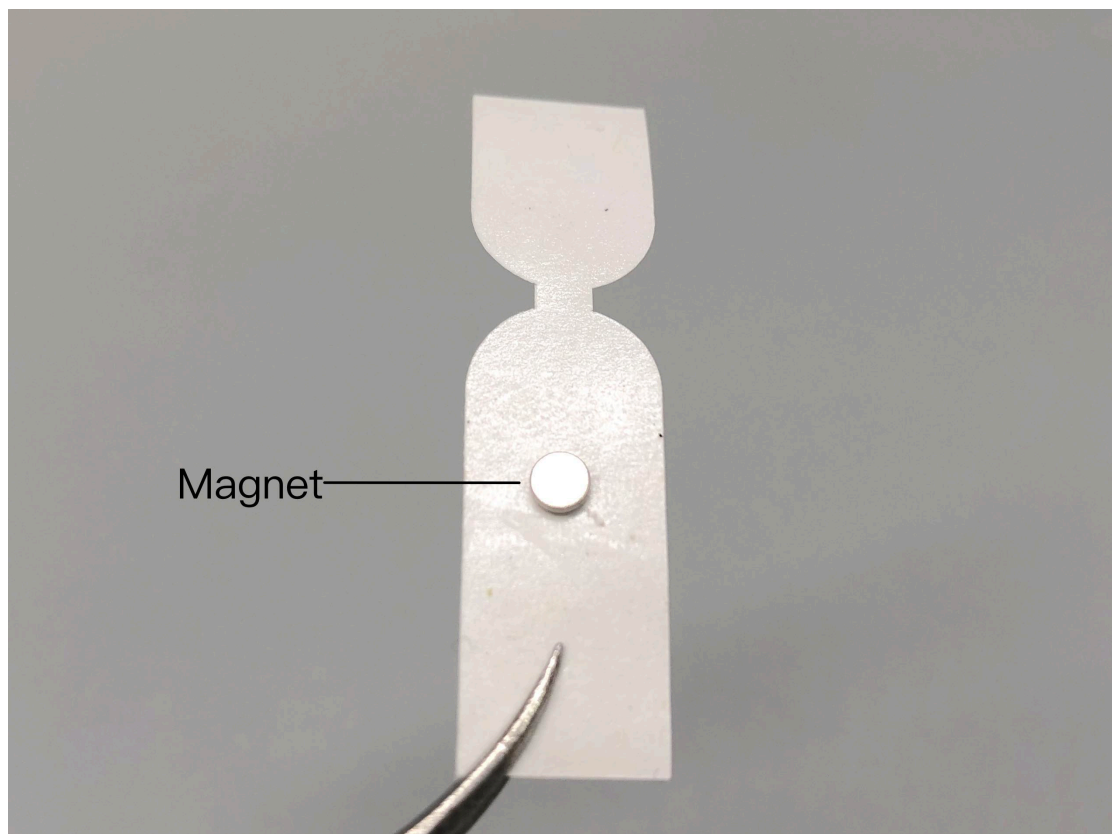

 
31.

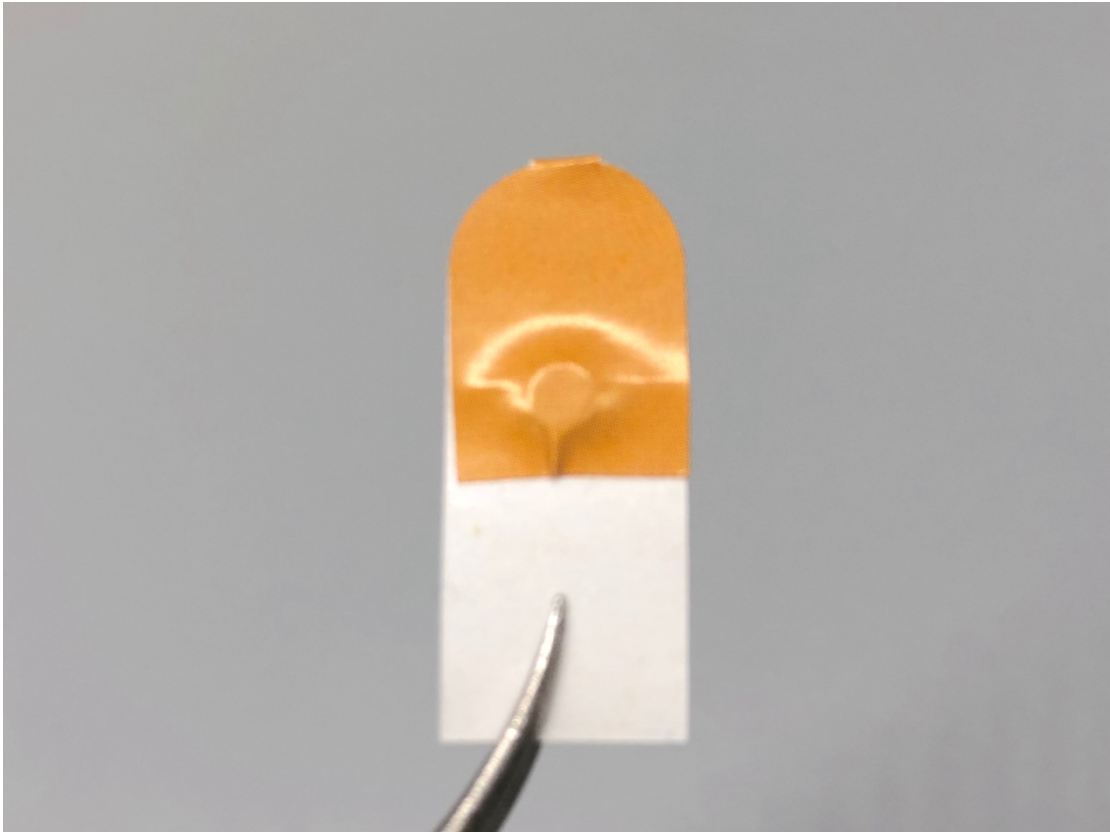

 32.

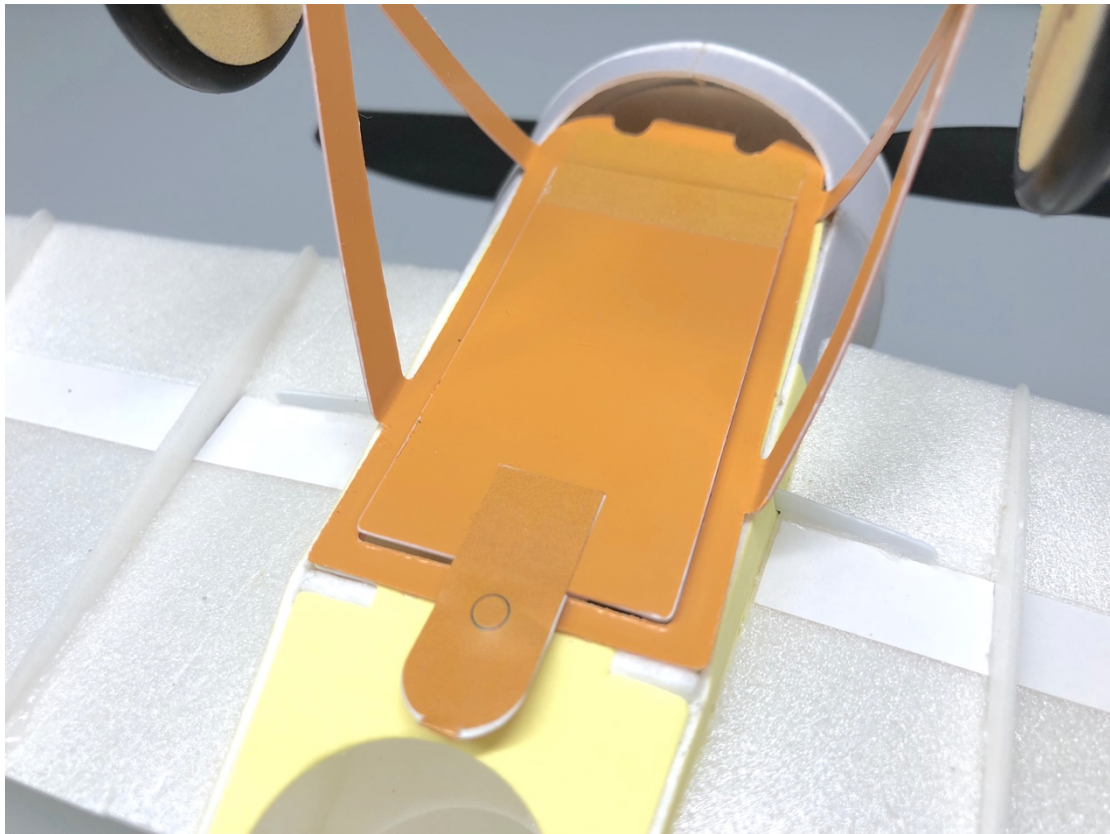

 
33.

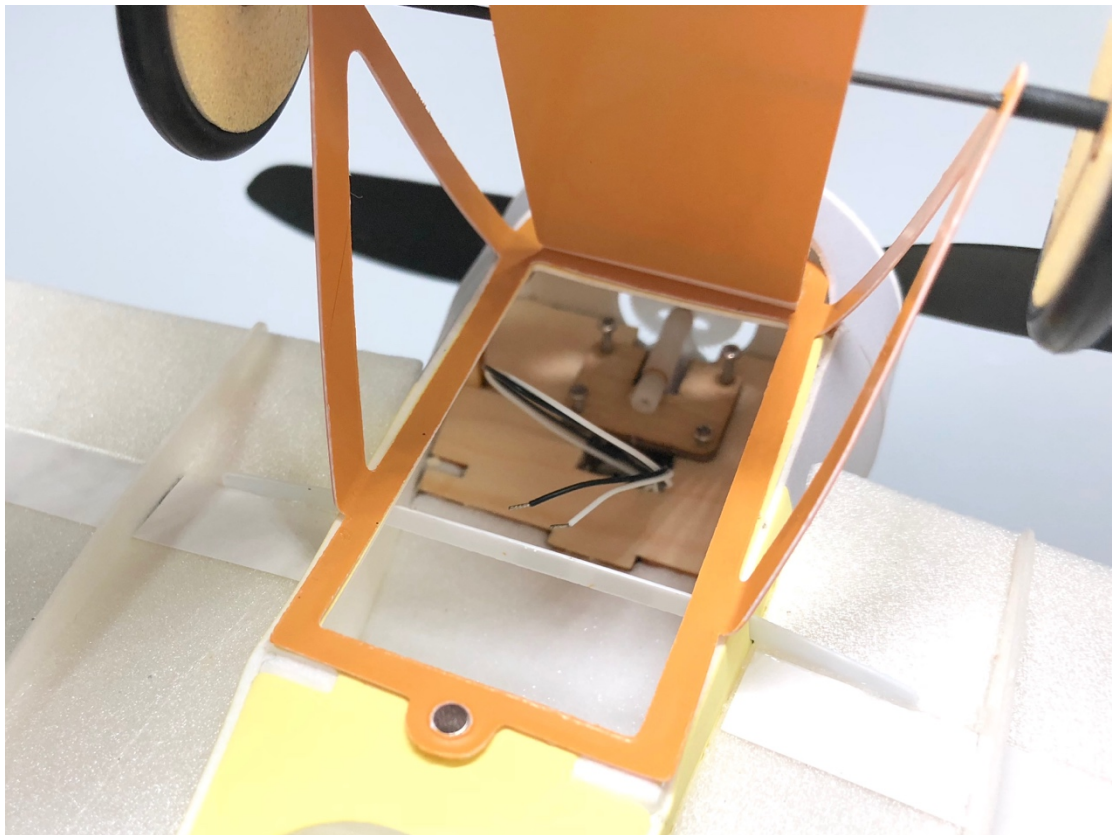


34.



 35.

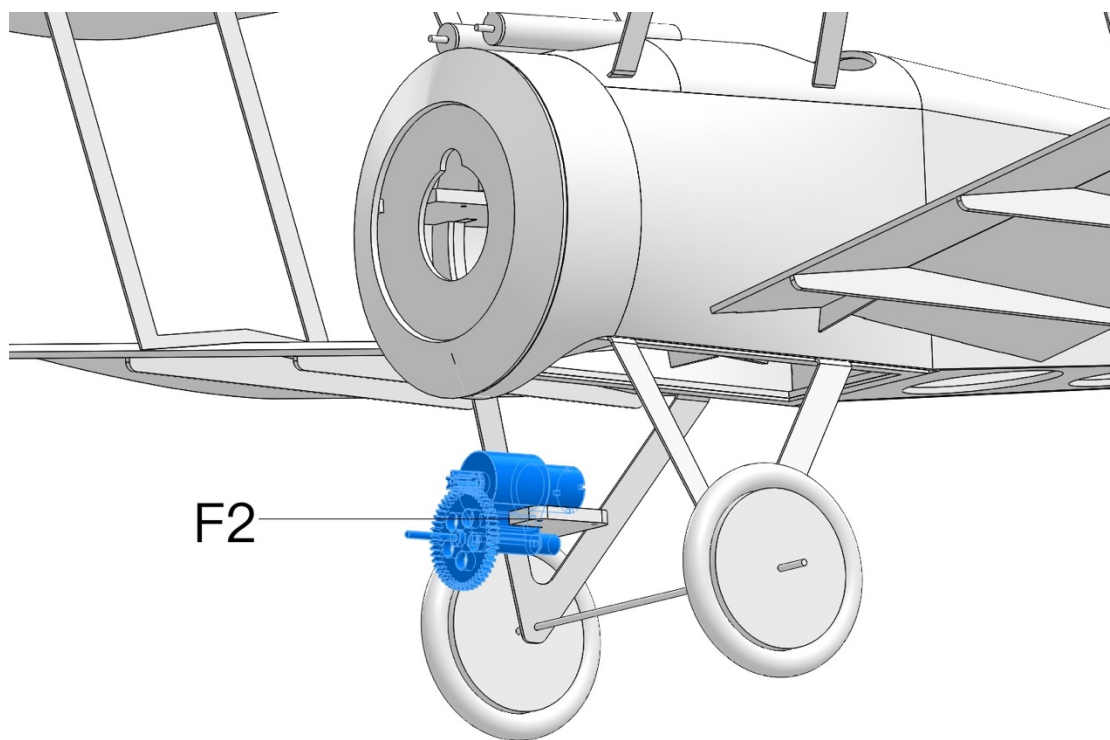

 
36.

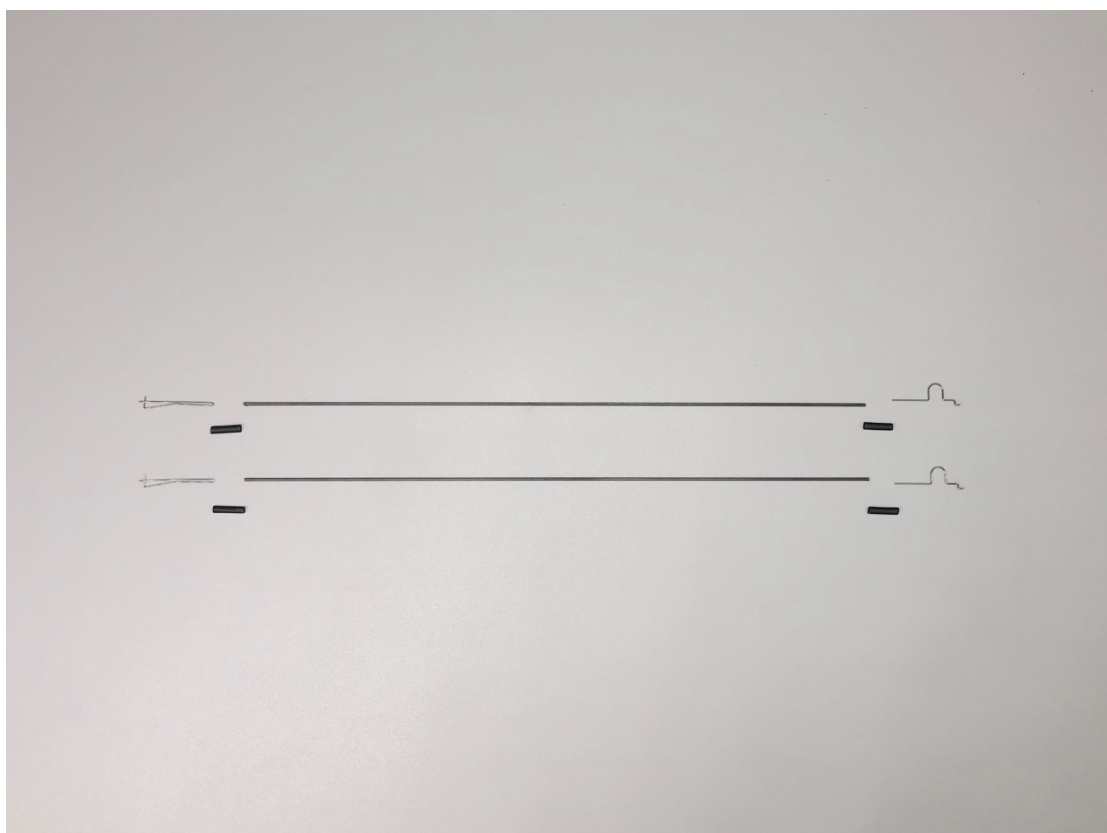


37.



 
38.

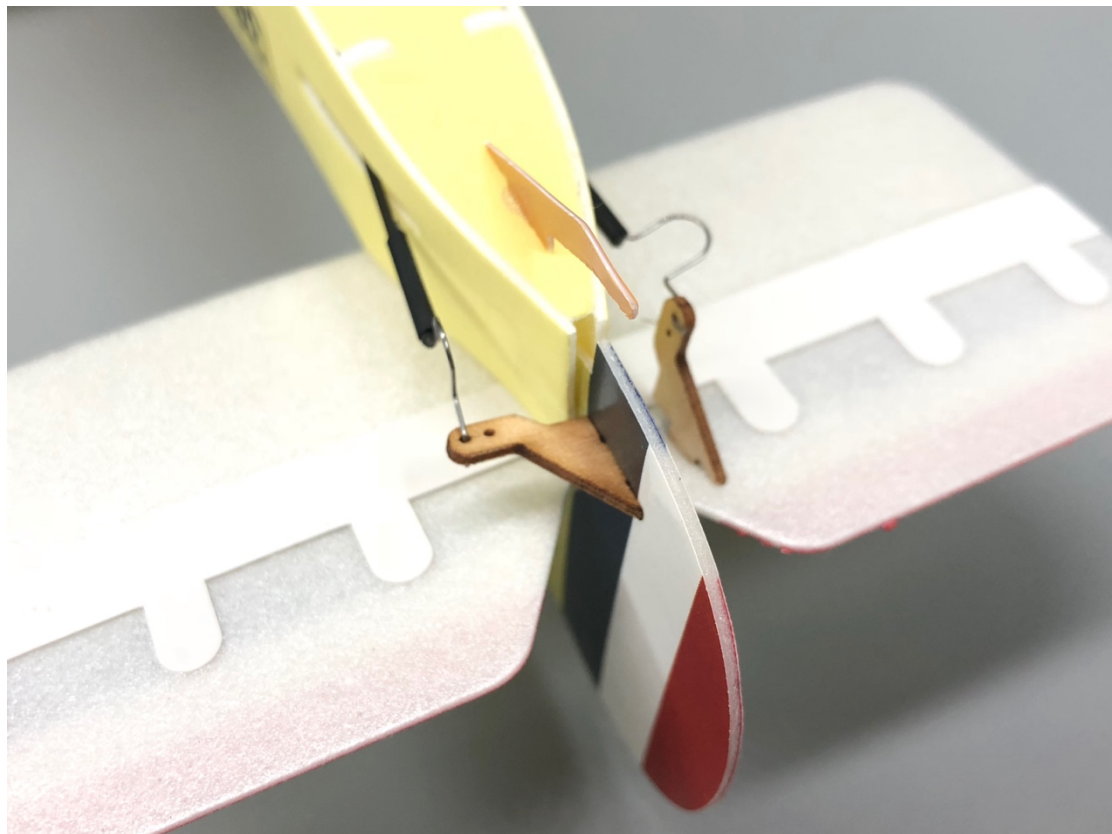

 
39. Use a straw to make a machine gun. The side of the straw is cut open, adjusted to a diameter of 4.5mm, covered with sticker.

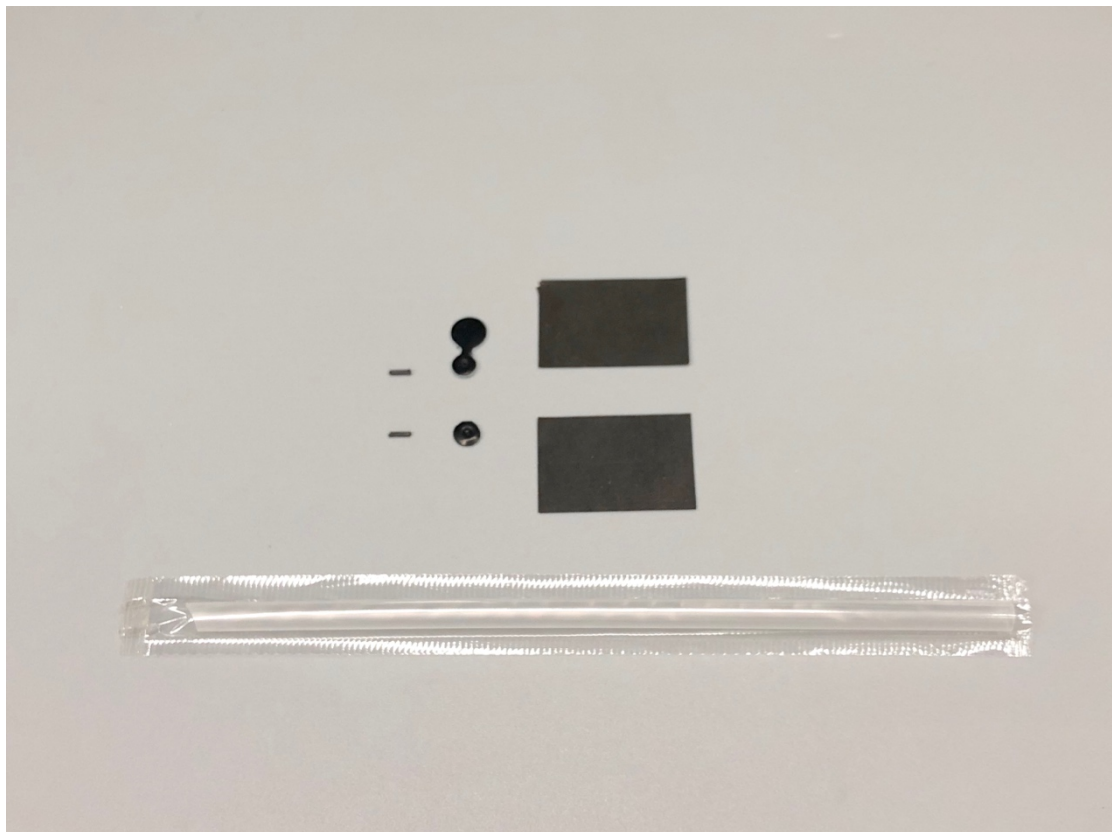

 
40.

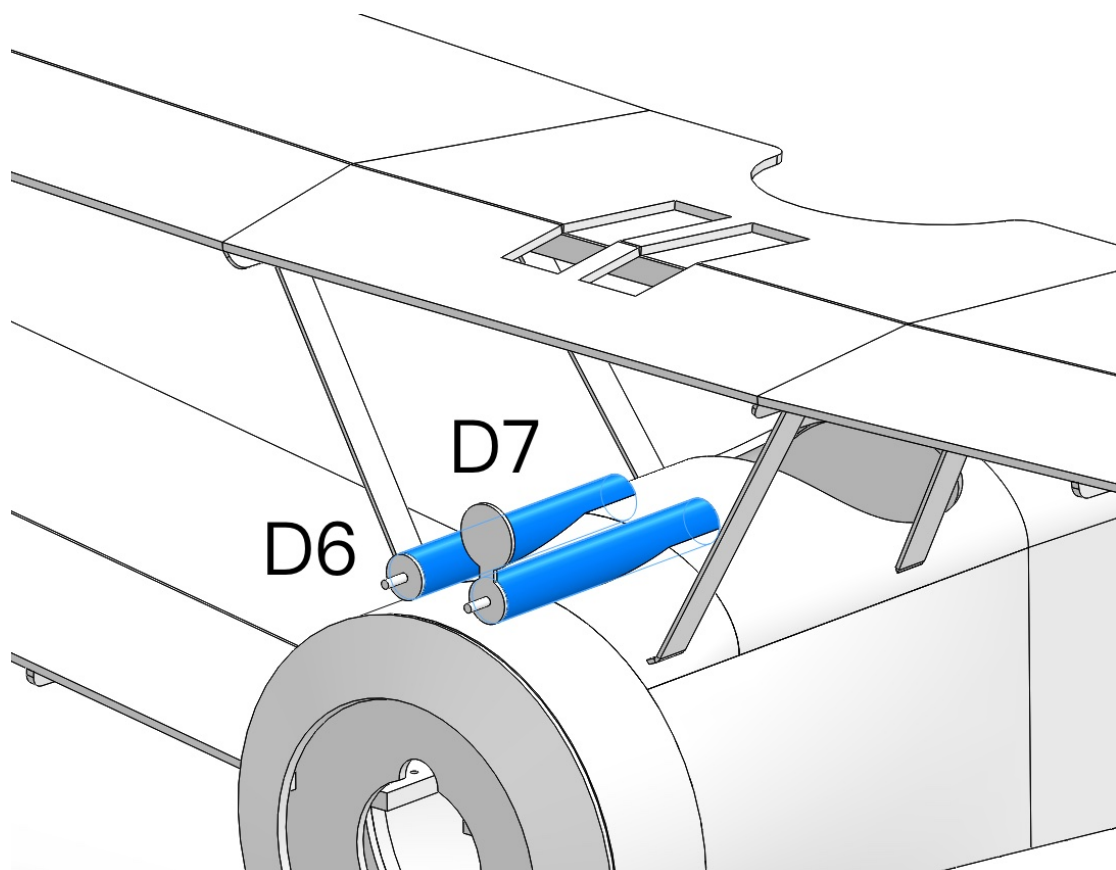

 41.

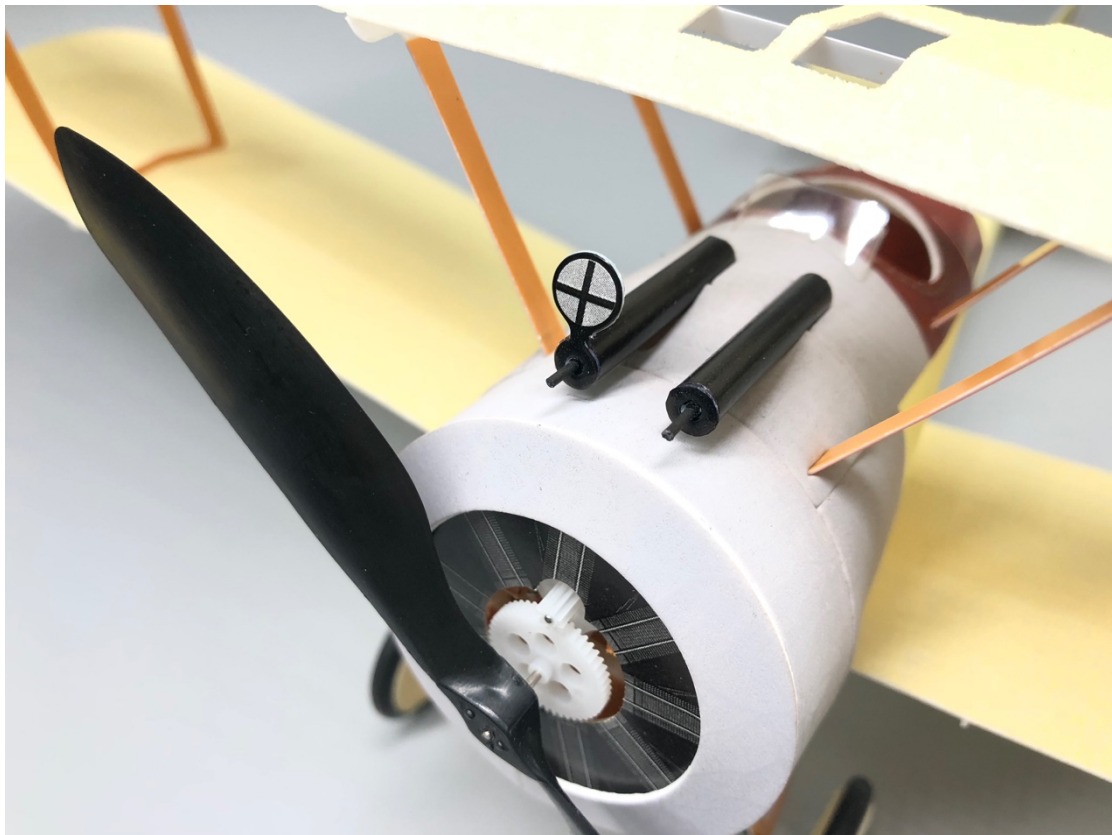

 42.

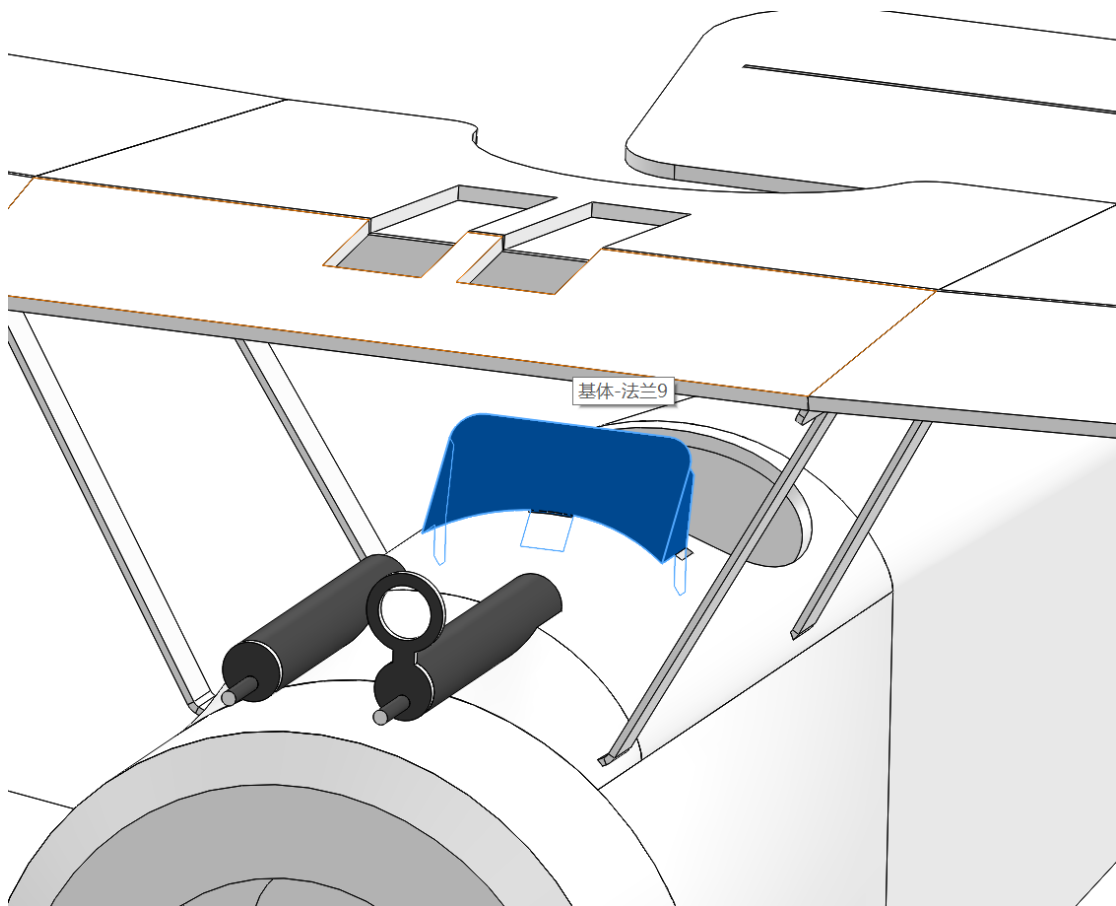

First test flight

- Use 150-250mah3.7v lithium battery
- Adjust the center of gravity to the upper wing support beam
- The rudder surface neutral point is adjusted to the same level of the tail
- Elevator and rudder amount are 5-8mm on both sides
- Enjoy your flight.

Contact MinimumRC: oceanchueng@qq.com