


材质: 157g哑粉纸
成品尺寸:75mm*150mm

Specification

Product : Intelligent Video Doorbell Model : M-100
Night Vision:850nm IR LED Battery : 1800mah Aluminum
Screen : 4.3in 480*272 Resolution : 2MP
Human Detect : Pyroelectric Infrared

Outdoor Sender : Hight: 61mm Width: 61mm Thickness: 16mm
Indoor Receiver : Hight: 96.5mm Width: 136.5mm Thickness: 15mm

Installation

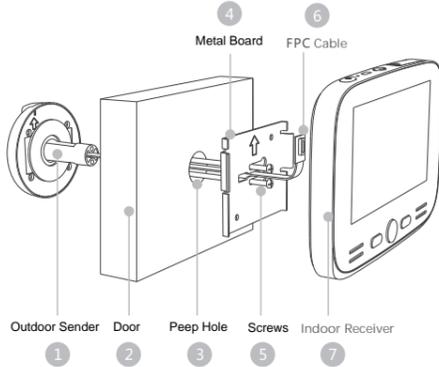

Requirements

- 1 Peep Hole : 14mm-50mm
 - 2 Door Thickness : 40mm-105mm
 - 3 According to the thickness of the door, choose the appropriate screws
- 注 : > Door thickness: 40mm-60mm: Screws: choose 42mm
> Door thickness: 60mm-87mm: Screws: 62mm
> Door thickness: 87mm-105mm: Screws: 82mm

Installation Steps

Steps >>>

Step >> 1

Detach the previous peep hole lens

Step >> 2

Use the right screws to fix the outdoor sender through peep hole

Step >> 3

Remove the tape on the sender , button downwards , adjusting the position of sender, and use FPC cable and screws to fix it. Sensor of the FPC cables should be downwards.

Step >> 4

FPC Cable go through the middle hole of the bracket, screws go through the side holes. Slide the bracket to the left, and make sure it is center vertically aligned with FPC.

Step >> 5

Tighten screws and fix the bracket. (do no fold the FPC).

Step >> 6

Insert the memory card (letters face up), input battery

Step >> 7

Take off the cover of FPC, correctly lay down all the cables according to the arrow direction.


Step >> 8

Turn around the receiver and check if all the cable is correctly placed, and aim at the bracket, vertically slide dome, confirming that devices is firmly, fixed on the wall.

Step >> 9

Switch on and test all functions. (Installation finished)

Instruction

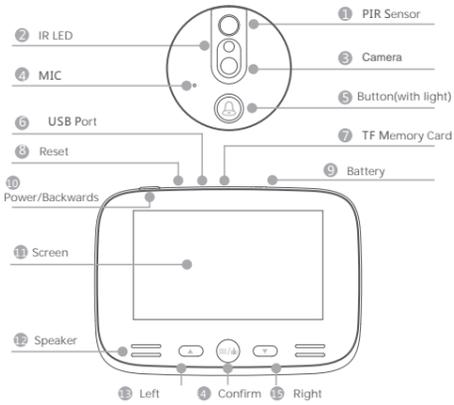

Functions

Main Interface >>>



Visitor Message >>

if no one reply after press doorbell for 2s, visitors can leave a message. voice and video will be recorded. 当

Surveillance >>

Enter surveillance interface, watch real-time outdoor video

Photo Album >>

Long press 'confirm' button can delete the photos, and pong press power button can return to video interface.

Video >>

Long press 'confirm' button can delete the videos, and pong press power button can return to video interface.

Mode >>

4 Options:

- Home : Visitors press doorbell , doorbell rings , screen on , auto photo taking and video recording

- Away : Visitors press doorbell , doorbell rings, screen off , auto photo taking and video recording

- No Disturb : Visitors press doorbell , doorbell not ring, screen off , auto photo taking and video recording

- Mode Switch : Switch to 'Photo' or 'Video' mode.

Setting >>

- 16 setting options
- Video Resolution

Resolution Options: HD1920*1080/HD1280*720

- Photo Resolution :

1MP, 2MP, 3MP Optional

- Recording Time :

5s, 10s, 20s Optional

- Ringing Bell Switch :

5 different options

- Motion Detect :

Function can be switch on and off. If motion detect is started, and visitors stay near the device (2-3m), lights on doorbell will flash and photo & video will be recorded. If motion detect function is off, device will not start.

- LCD :

Maunally switch on and off.

- Volume :

3 optionals: High/Medium/Low

- Night Vision :

Adjusting night vision according to environment

- Time/Date :

Current time/date setting

- Visitors :

Choose visitor recorders

- Auto Switch off :

Choose 'Turn off' (screen light on , battery-consuming) /10s/20s/30s (enter standby mode). 10s is the default setting.

- Language :

Traditional Chinese/Simplified Chinese/English

- Light Source Frequency :

50Hz/60Hz optional

- Formatting :

After formatting, all files will be deleted

- Restore Factory Setting :

Any device setting error, can choose restore factory setting


- Firmware Vision

Vision of device

Product Features

- ▲ Time/date display on interface
- ▲ Long press doorbell for 2s, can leave a message(max 15s)
- ▲ HD video surveillance (2MP HD Camera)
- ▲ Clear night vision
- ▲ Video with sound/automatically photo taking and video recording
- ▲ Motion detect
- ▲ Automatically time/date refresh
- ▲ Support TF memory card. Loop recording

Packing List

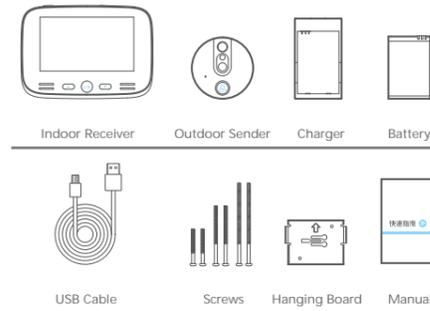

Sender	< X 1 >	USB Charger	< X 1 >
Receiver	< X 1 >	Screws	< X 6 >
Charger	< X 1 >	Hanging Board	< X 1 >
Battery	< X 1 >	Manual	< X 1 >

Attention

- 1.Direction of the lithium battery. (Battery handle face up, and push downwards).
- 2.Do not place the device on any uneven surface, in case of falling down. Do not touch the motion detect sensor for the outdoor sender.
- 3.Do not press the screen to hard.
- 4.Do not expose the device under extreme high temperature, moisture or any other severe environment.
- 5.Do not place the device under heavy rain.
- 6.Insert the TF memory card before insert the battery.(TF card should be at G8 speed) (letter on the card face up).

Intelligent Video Doorbell

User Manual >>

After-sales Service

1. Please contact us directly for any technical problems. Any quality problem within 7 days, we can replace with a new device. Any non-manual damage, please keep the whole package, and we can fix or replace with a new device.
2. Date of purchase please see the invoice.
3. We do not replace any faulty device which is man-made damage.
4. Limited maintenance service is available for below circumstance:
 - a. Man-made damage.
 - b. fixed by any authorized organizations.
 - c. Damage caused by bad shipping
 - d. Damage caused by any force majeure

User Profile

Name	
Gender	
Age	
Mobile	
Address	
Purchase Date	
Model	
Sales No.	

Examiner: 

Date: _____

Intelligent Video Doorbell

CE RoHS Made in China

Our company do not take the responsibility for the printing error. The image shown here is indicative only. If there is inconsistency between the image and the actual product, the actual product shall govern.