- Display of the centre frequency in Channels:Real-time display of the frequency of current runing channel
- 5Inch LCD Display
- Adjustable focus
- Built-in DVR,real-time recording&replaying
- Maximum support 64GB TF Card
- Support one key power saving mode
- Support floor standing using
- Flexible head band,can be adjusted freely,ergonomics design,comfortable for wearing

Supply voltage:2s battery(7.4~8.4V) Operating current:600-750mA

Receive Sensitivity:-95dBM

Net weight:294.7g(not including the antennas)

Product size:150mm\*152mm\*96mm(not including the height of antennas and base)

Net weight of antennas:29g(Plate antenna:13g,mushroom antenna:16g)

Receive frequency:5.8G 40CH

Built-in 5.8G 40 frequency auto search frequency receiver 1: 5865 , 5845 , 5825 , 5805 , 5785 , 5765 , 5745 , 5725

2: 5733 , 5752 , 5771 , 5790 , 5809 , 5828 , 5847 , 5866

3: 5705 , 5685 , 5665 , 5645 , 5885 , 5905 , 5925 , 5945

4: 5740 , 5760 , 5780 , 5800 , 5820 , 5840 , 5860 , 5880 5: 5658 , 5695 , 5732 , 5769 , 5806 , 5843 , 5880 , 5917

06

#### Removel of Common breakdown

No images on the screen of the glasses

Make sure the power and receiver is opened

Make sure the receiving frequency is the same with the transmitting frequency

Make sure the power plug of the transmitter is plugged in

Make sure the connection between camera and transmitter is

Make sure the antennas of the glasses and transmitter are installed

### The quality of the image received is poor or the transfer range is short

Make sure there is no other electronic launching equipments nearby in the same frequency interfering, the FPV system should choose other differnet frequencey avoid interfered frequency in the same area.

Make sure the antennas of the glasses and transmitter are

Make sure there is no obstacles such as moutain, building, trees in front of the transmitter and glasses, it should be used in a open field

### Notice

Make sure the battery of the VR D2 stay saturated

For purpose of avoiding the danger from fire, electric shock or product damage, do not make the plane be rained, wetted,splashed or dripped by water,do not put the items full of water such as vase on the plane

Do not throw or crash the plane, avoid violent tremors, or it will lead the product damage or abnormal display

Do not use in the cold,hot,dust or wet condition. Take extra care in following place,in case of the breakdown of the glasses

Place with sand or dust

Place with water, if you want to clean the dust or dirt on the lens in raining condition or on the beach,pls use the professional wiping rag.

Do not stuff the glasses in a crowded or full bag,in case of the damage of the raster and human body.



CHARGER

07



RECHARGEABLE

BATTERY











INSTRUCTION MANUAL

/ Eachine RD2 /

www.eachine.com

7.4V 2200mAh 充電池

用戶手册





# **Detecting signals** in real-time

Can change to optimum signal display in real-time, and dispaly the current receiving channel by indicator.

# Adjustable focus, suitable for myopia

The focus distance of the glasses lens is about 190mm, Magnification is 3.5X



02







CH: Channel Adjustment

MEN: display the menu keys, short press to enter. They are: brightness, contrast, chroma

CAM / DVR / +: In the default interface: CAM / DVR switch button; At the brightness, contrast, color interface, unit to increase a value according to a short brightness / contrast / color.Long press will continued to increase

POWER / -: In the default interface: Short press to enter the power saving mode, short press again to exit; when the brightness, contrast, color interface according to a short brightness / contrast / color value is decremented by one unit. Long press will continues to decrease

◀ In the DVR interface, short press to enter the DVR recording mode. Short press again will stop to recording (The indicator is flashing when recording, recording indicator is long bright when stop recording) Press to stop recording; press the rewind function to perform in a short video

▶ In the DVR interface , long Press to enter the MENU in the record folder. To perform rolling up or down and select the comm ◀ and ▶ file through a short press 1 and 2 after entering the interface; confirm the operation or play (Stop) recorded file by a short key; run the fast forward function in the video playback interface

■ In the DVR interface, long press to enter the DVR MENU; short press ■ and b to operate Roll up and down command; short press 
■ to confirm operation