



USER MANUAL

250W 10A

ANTIMATTER

Synchronous Balance Charger / Discharger

www.charsoon.com

Index

Specifications.....	1
Special features.....	1
Warnings and Safety notes.....	3
Program flow chart.....	4
Keyboard basics.....	5
Parameter setup.....	6
Lithium battery program.....	9
Charging Lithium battery in BALANCE mode.....	10
Charging a Lithium battery in normal CHARGE mode.....	11
Fast charging a Lithium battery.....	11
Pre-charging a Lithium battery.....	12
"Storage" charge/discharge a Lithium battery.....	12
Discharging a Lithium battery.....	13
Lithium battery external expanding discharge mode.....	14
Charge-to-discharge & Discharge-to-charge cycle mode for a Lithium battery.....	15
Lithium battery in monitoring mode.....	15
NiCd/NiMH battery program.....	16
Charging a NiCd/NiMH battery.....	16
Discharging a NiCd/NiMH battery.....	16
Charge-to-Discharge & Discharge-to-Charge cycle mode for a NiCd/NiMH battery.....	16
NiCd/NiMH forming charge.....	17
Pb(lead-acid) battery program.....	18
Charging a Pb battery.....	18
Discharging a Pb battery.....	18
Special modes program.....	19
Electric motor drive.....	19
Foam-Cut drive.....	19
Measuring internal resistance of the battery.....	20
Data save/load program.....	21
General Status information.....	22
Warning and error information.....	22
Error messages.....	23

Thank you for purchasing Charsoon . Please read the entire Operating Instructions completely and attentively as it contains a wide variety of specific programming and safety information.

Specifications

Input voltage range:	10--18.0VDC
Charge current range:	0.05--10.0A
Discharge current range:	0.05--7.0A
Maximum charge power capacity:	250W @ input voltage >13.5V
Maximum discharge power capacity:	20W
Maximum external discharge power capacity:	170W @ 25V/7A
Current drain for balancing:	<300mA
Balance accuracy:	<10mV
Lithium (LiPo/LiIo/LiFe) battery cell count:	1--6 series (In non-balance mode, expand LiFe to 8S)
NiCd/NiMH battery cell count:	1--17 series
Pb battery cell count:	1--12 series (2--24V)
Battery setup memories:	10
Intelligent temperature control:	Yes
PC Connect:	USB port
Weight:	340g
Dimensions (L X W X D):	137X82X26mm

Special features

- High power, high current, high-performance power conversion circuit. The charger uses advanced **Synchronous buck-boost DC/DC converter** technology with an output conversion efficiency that can reach over 90%. This not only saves power and reduces heat build up but also makes the charger more compact and conveniently mobile.
- Two input power choices: DC jack with auto-resetting fuse (Maximum input current 6A) and butt-welded alligator clips with 4mm bullet connectors (25A). The output power can be adjusted to align with the available input power, thus preventing input current overload and protecting the DC source.
- The charger can be used with three types of Lithium batteries-LiPo, Lilo, LiFe- and has a fully integrated cell balancer.
- Internal temperature sensor and temperature controlled automatic cooling FAN, controls the internal temperature and provides intelligent protection. When the internal temperature is over 60 C (140 oF), the output power is automatically reduced by 25%. If the temperature exceeds 65 C (149 oF) the charge cycle is stopped.
- Convenient set of 10 battery profile memories that can be saved and loaded by number.
- 2X16 backlit LCD screen that provides rich information including active mode, current, voltage, total charge(mAh), charging time and temperature etc.
- Various charging/discharging settings and cycles to meet a wide range of customer needs. For Lithium batteries: balance charging, normal charging, fast charging, storage, discharging, ext-discharging, charge/discharge cycling, and battery monitoring. For NiCd/NiMH batteries: charging-auto, charging-manual, discharging, charge/discharge cycling and forming charge. For Pb batteries: charging and discharging.
- Unique Lithium battery expanding discharge program. When you connect the external capacity resistance, you can use it as the maximum discharge power capacity--170W(@25V/7A).
- Unique Lithium battery Monitor program. When you use other equipment to charge or discharge a Lithium pack, you can use the charger to monitor the per-cell voltages, battery temperature and process time. If any individual cell appears over-charged or over-discharged or the pack is too hot or the process has gone on for too long, the charger will generate an alarm sound and the related information will blink.
- Electric motor test mode can be used to run-in electric motors, test motor parameters and performance, check tolerances etc.

- Foam-cut drive. In this mode, the charger acts as a convenient power supply for a hot wire foam cutter.
- Battery interior resistance measurement. The charger can not only measure the internal resistance of the battery pack, and also can measure the per-cell internal resistance(only available for lithium battery).
- Perfect protection. The charger has protection for reversed polarity(input or output), low input voltage, battery temperature, charging capacity and time overrun.

Warnings and Safety notes

- Keep the charger away from children and pets at all times.
- Never leave the charger unsupervised when charging or discharging. If you leave, disconnect the battery to prevent any unexpected dangers or damage.
- Ensure the charger program and settings match the battery pack otherwise the battery will be damaged and a dangerous situation may arise, especially for Lithium batteries, which may cause a fire.
- Do not mix batteries of different types, different capacities or from different manufacturers.
- Do not disassemble the charger.
- Do not place the charger or any battery on a flammable surface or near a combustible material while in use. Do not charge or discharge on a carpet, cluttered workbench, paper, plastic, vinyl, leather or wood, inside an R/C model or inside a full-sized automobile.
- Never block the air intake holes and never use in a refrigerated or high temperature environment. If used in such an environment, the internal temperature protection may result in abnormal charging/discharging that could be dangerous.
- Do not allow water, moisture, metal wires or other conductive material into the charger. Never charge or discharge any battery having evidence of leaking, expansion/swelling, damaged outer cover or case, color-change or distortion.
- Do not try to charge “non-rechargeable” dry cells.
- Do not exceed the battery manufacturer’s suggested maximum charge rates.
- Beware that the external case temperature of the charger will increase during charging/discharging at high power.
- Carefully follow the battery pack manufacturer’s recommendations and safety advice.

Recommended connecting way:


1. Connect charger’s input power supply, and turn on it.
2. Connect Li batteries’ balance port.
3. Connect the main charging port’s positive pole to cells’ positive pole, and then connect negative pole to cells’ negative pole (this will avoid striking fire while connecting Li cells).
4. Start charging and discharging...
5. After finishing charging and discharging, pls disconnect the cell and charger, and then turn off the charger’s power supply.

Standard battery parameters

	LiPo	LiIc	LiFe	NiCd	NiMH	Pb
Nominal voltage	3.7V/cell	3.6V/cell	3.3V/cell	1.20V/cell	1.20V/cell	2.0V/cell
Max.charge voltage	4.2V/cell	4.1V/cell	3.6V/cell	1.60V/cell	1.60V/cell	2.45V/cell
Storage voltage	3.85V/cell	3.75V/cell	3.3V/cell	n/a	n/a	n/a
Allowable fast charge	≤1C	≤1C	≤4C	1C-2C	1C-2C	≤0.4C
Min.discharge voltage cut-off level	≥3.0V/cell	≥2.5V/cell	≥2.0V/cell	≥0.85V/cell	≥1.0V/cell	≥1.75V/cell

Note: Be very careful to choose the correct voltage for different types of battery otherwise you may cause damage to the batteries. Incorrect settings could cause the cells to vent, burn or explode leading to injury or loss of property.

Program flow chart

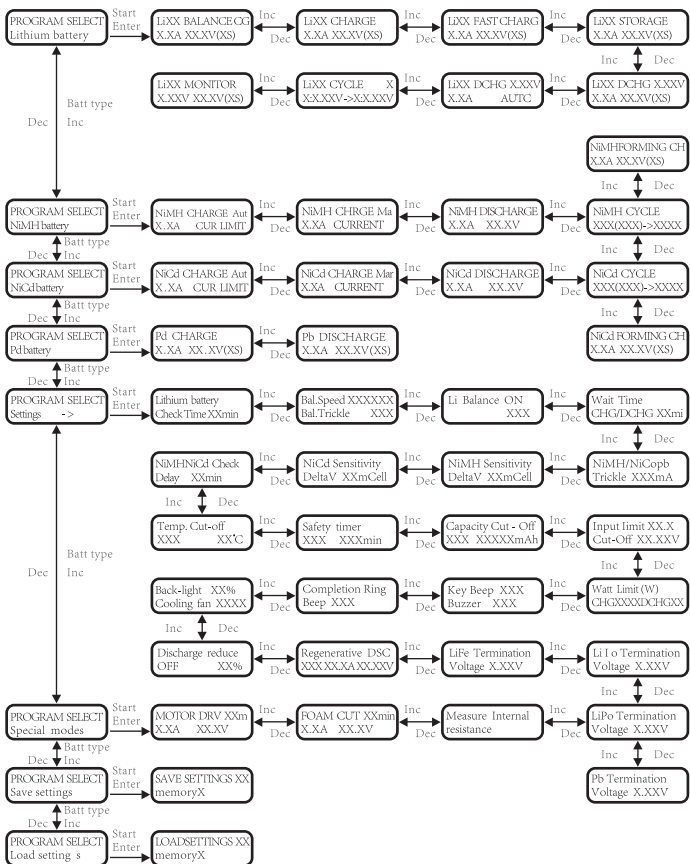


Note: When you turn off the charger it will remember the current menu and stat from that menu when next turned on again.

Keyboard basics

1. Go to the main menu, press the **Inc** button or the **Stop/Batt type** button to go down, and press the **Dec** button to go up; press the **Start/Enter** button to enter a sub-menu.
2. In a sub-menu, press **Start/Enter** to blink the chosen item, and then alter the value with **Inc** or **Dec**. With nothing blinking you can go to the sub-menu below with **Inc** and above with **Dec**. Press **Stop/Batt type** to go back to the previous screen.
3. In some sub-menu, press and hold **Start/Enter** for more than 3 seconds to start the process, such as starting charging or discharging.
4. During the charging/discharging process you can terminate the process at any time by pressing **Stop/Batt type** and check the attached information with **Inc** or **Dec**. Press **Start/Enter** to go back to the main information screen.
5. During the discharge process, press **Start/Enter** to alter the discharge current. When the discharge current blinks, press **Inc** to increase it or **Dec** to decrease it, then press **Start/Enter** to confirm the change.
6. Press **Stop/Batt type** for more than 3 seconds to start the display of the active test information as per the following diagram.

Present testing information:

In this display the output voltage is the idle voltage measured at the output terminals (that is, the voltage of the connected battery pack).

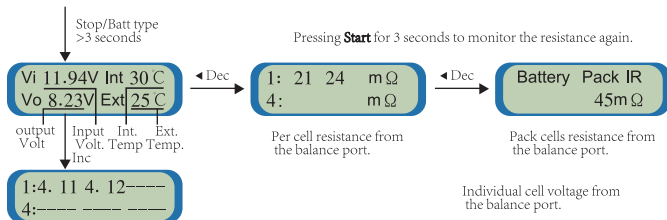

7. **Reset to Defaults** function. Press **Stop/Batt type** and **Start/Enter** together for more than 3 seconds to obtain this display:

Resume defaults?
CONFIRM (ENTER)

Press **Start/Enter** to reset all values to the system-default settings.

8. Adjust Current, Temp. Cut-Off, Safety timer, Capacity Cut-Off in course of charging and discharging.

Method of Application:

When in charging and discharging interface, press **Start/Enter** for 3 seconds, and current begins blinking. Press **Inc** or **Dec** to adjust current, and press **Start/Enter** to save changes. If users press **Stop/Batt type** or without any operation for 1 minute, it will cancel and quit from the changes.

Note: Adjustment of current is only effective for charging and discharging, which will not saved as user setting.


When in charging and discharging interface, press **Dec** for several times to see need-to-be changed information interface. Press **Start/Enter** for 3 seconds, and the value begins blinking. The adjust method is as same as the above.

Note: This change can be saved as user setting.

Parameter setup

Users should check the parameter settings and adjust the parameter values according to the specifications of the pack to be charged or discharged.

Note: The screen diagram on the left shows the system's default setting.

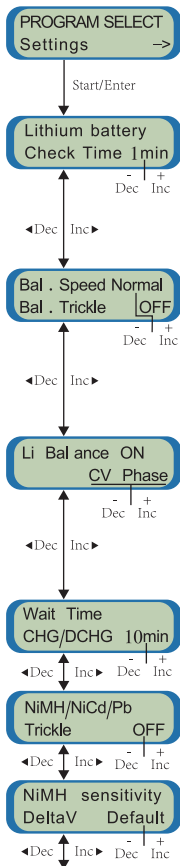

User parameter setup initial display.

The charger checks the cell count of Lithium batteries automatically at the beginning of the charge or discharge process in order to detect and avoid erroneous setting by the user. However, deeply discharged batteries can be perceived incorrectly. To avoid this problem you can set an initial time during which to charge the battery at a low current, usually 100mA. Normally 10 minutes is enough to detect the cell count correctly. For batteries of different capacities, you should adjust the time delay. **Note:** If you set the time delay too long for a low capacity battery then the charging process can be finished within the time delay with an erroneous cell count, which may damage the battery and could be dangerous.

Range: 1-10 min.(1 min, default)

For balance charging Lithium batteries. If the Bal. Speed is set to Fast, the CV termination current will be higher, the charging time shorter and the per-cell voltage lower. When set to Slow, the CV termination current will be lower, the charging time longer and the per-cell voltage higher. The default value of Normal is between the Fast and the Slow. If Bal. Trickle is ON, the charger won't stop charging until the current falls to around 20mA.

Bal. Speed: Fast, Normal & Slow.(Normal, default)

Bal. Trickle: OFF & ON:(OFF, default)

For balance charging Li battery. There are three balance modes options: CV phase, storage voltage and always. If the balance mode is set to CV phase, when any cell's voltage reaches the set voltage for CV, it will enable the balancer. When set to "always", the balancer will be enabled from the beginning of the charge process. When set to "storage voltage", the balancer will be enabled when any cell's voltage exceeds the default storage voltage for the configured chemistry.

Balance mode: CV phase, storage voltage, always(CV phase, default)

When running a charge/discharge cycle program for a Lithium, NiMH or NiCd battery the charger will stop for a while before continuing to the next phase. This allows the pack to cool down.

Range: 1-60 min.(10 min, default)

You can turn post charge-completion trickle charging. On or Off for NiMH, NiCd or Pb batteries.

Range: OFF, 10-500mA.(OFF, default)

Usually, the NiMH battery voltage will drop a little right after reaching full charge. This is known as $-\Delta V$. You can alter the charger delta-peak detection sensitivity.

Range: 1-20mV/Cell.(4mV/Cell, default)

NiCd Sensitivity
DeltaV Default

◀Dec ↑ Inc ▶ - +
Dec Inc Dec Inc

Usually, the NiCd battery voltage will drop a little right after reaching full charge. This is known as $-\Delta V$. You can alter the charger's delta-peak detection sensitivity.
Range: 1-20mV/Cell.(8mV/Cell, default)

NiMH/NiCd Check Delay
Omin

◀Dec ↑ Inc ▶ - +
Dec Inc Dec Inc

When NiMH&NiCd batteries are deeply discharged or left unused for a long time, they will produce a false $-\Delta V$ which stops charging early. You can disable $-\Delta V$ testing to avoid this problem.
Range: 0-30 min.(0, default)

Temp. Cut-Off
ON 50 C

Dec + - +
Dec Inc Dec Inc

◀Dec ↑ Inc ▶

Battery upper temperature limit. The battery temperature can be monitored with the attached temperature sensor. In order to protect the battery from damage due to high temperatures the charger will stop charging or discharging immediately if the temperature exceeds the cut-off setting. Users can choose C or F as the temperature unit.
Range: 20-80 C (68-176 F). F=(9/5) × C +32.

Safety timer
ON 120min

Dec + - +
Dec Inc Dec Inc

◀Dec ↑ Inc ▶

Charging time upper limit. The charging process will stop immediately if it exceeds the set value.
Range: 1-999 min

Capacity Cut-Off
ON 5000mAh

Dec + - +
Dec Inc Dec Inc

◀Dec ↑ Inc ▶

Capacity protection. The charging/discharging process will stop immediately if the calculated charge input/drained exceeds the set value.
Range: 100-99900mAh

Input power low Cut-Off
10.00V

Dec + - +
Dec Inc Dec Inc

◀Dec ↑ Inc ▶

Input current limit & Input voltage protection lower limit. The charging/discharging process will stop immediately if the input voltage falls below the set value.
Range: 10.00-15.00V(10.00V, default)
Note: Current limit is not very accurate, which may be 20% difference, max.

Watt Limit (W)
CHG:AUTO DCHG:15


Dec + - +
Dec Inc Dec Inc

Charge/Discharge power limit. The maximum charge/discharge power of charger can be adjusted in order to limit internal temperature and to protect the input current from over-loading. When the limit is set to AUTO the charger can adjust the output charging power according to the input capability.
CHG: 50-250W and AUTO. DCHG: 5-20W

Lithium Check time

◀Dec ↑ Inc ▶

Note: The maximum charge power capacity is also limited by input current. The maximum input current of the charger is about 21A, and $W_{max} \approx I_{max} * V_{in} * 90\%$. (For example, when the input voltage is 11V, the maximum charge power capacity $\approx 21 \times 11 \times 90\% = 207W$)

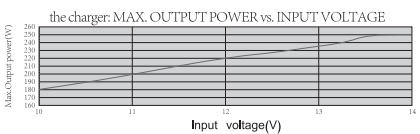

Key Beep Buzzer ON

◀Dec Inc▶ Dec +

Key confirmation and alert tone. If the keyboard sound is ON there will be a beep when you press any key. If the buzzer is ON the charger will generate an alert tone for certain events.

Key Beep: OFF&ON:(ON, default)

Buzzer: OFF&ON:(ON, default)

Completion Ring Beep always

◀Dec Inc▶ Dec +

Process completion tone. Controls the tones generated at end of charging or discharging and the cyclic charging/discharging indication.

Options: Beep 5 times, Beep 3 minutes, Beep always (continuous until user presses STOP), Beep OFF

(Beep always, default)

Back-light 50% Cooling fan AUTO

◀Dec Inc▶ Dec +

Back-light and cooling fan control. Adjust the LCD backlight brightness. There are three cooling fan modes: ON, OFF, AUTO. In AUTO-Mode, the charger adjusts the fan automatically to control its internal temperature.

Cooling fan: OFF, ON & AUTO (AUTO, default)

Discharge reduce OFF 50%

◀Dec Inc▶ Dec +

Discharge reduce setting. When you set it to "ON", if the final voltage target storage voltage is reached, the buzzer will beep for three times, and the left of the second line display "D>>", and the charger enters into the high precision discharge process. The process won't stop until the current reaches xx % of the configured discharge current.

Reduce: ON, OFF Range: 1-99%

LiFe Termination Voltage 3.60V

◀Dec Inc▶ Dec +

Termination voltage for LiFe. Adjust LiFe's charge termination voltage. Press **Start/Enter** for more than 3 seconds to blink the "Voltage" value, then press **◀Dec** and **Inc▶** to adjust the termination voltage.

Range: 3.40V-3.90V, Step: 0.01V(3.60V, default)

Lilo Termination Voltage 4.10V

◀Dec Inc▶ Dec +

Termination voltage for Lilo. Adjust Lilo's charge termination voltage. Press **Start/Enter** for more than 3 seconds to blink the "Voltage" value, then press **◀Dec** and **Inc▶** to adjust the termination voltage.

Range: 3.90V-4.20V, Step: 0.01V(4.10V, default)

LiPo Termination Voltage 4.20V

◀Dec Inc▶ Dec +

Termination voltage for LiPo. Adjust LiPo's charge termination voltage. Press **Start/Enter** for more than 3 seconds to blink the "Voltage" value, then press **◀Dec** and **Inc▶** to adjust the termination voltage.

Range: 4.00V-4.30V, Step: 0.01V(4.20V, default)

Pd Termination Voltage 2.40V

◀Dec Inc▶ Dec +

Termination voltage for Pb. Adjust Pb's charge termination voltage. Press **Start/Enter** for more than 3 seconds to blink the "Voltage" value, then press **◀Dec** and **Inc▶** to adjust the termination voltage.

Range: 2.20V-2.50V, Step: 0.01V(2.40V, default)

Note: The Termination voltage controls the transition from Constant Current (CC) to Constant Voltage (CV) charging for LiXx and Pb chemistries. It also defines the per-cell limit for cell overvoltage detection.

If you change the default termination voltage, the charge and discharge setting screen will note this difference by alternatively blinking battery's type and setting voltage value.

Lithium battery program

The charger provides a number of Lithium programs including Balance, Normal, Fast and Storage. Only the Balance mode requires the balance lead connected. However, the other modes will provide additional per-cell over-voltage protection if the balance lead is connected compared to running them without it, where they can only utilize the total pack voltage.

	Balance connector required	Balancer active	Charge termination condition
Balance -Normal	Yes	Yes	$I_{cv}=I_{cc}/10$ OR $V_{out}=(cell_count \times cell_max_voltage)+0.2$
Balance -Fast	Yes	Yes	$I_{cv}=I_{cc}/5$ OR $V_{out}=(cell_count \times cell_max_voltage)+0.2$
Balance -Slow	Yes	Yes	$I_{cv}=I_{cc}/40$ OR $V_{out}=(cell_count \times cell_max_voltage)+0.2$
Charge	Optional	No	$I_{cv}=I_{cc}/10$ AND $V_{out}=cell_count \times cell_max_voltage$
Fast Charge	Optional	No	$I_{cv}=I_{cc}/5$ AND $V_{out}=cell_count \times cell_max_voltage$
Storage	Optional	No	$V_{out}=cell_count \times cell_max_voltage$
Cycle - charge	Optional	No	$I_{cv}=I_{cc}/10$ AND $V_{out}=cell_count \times cell_max_voltage$
Cycle - discharge	Optional	No	$V_{out}=cell_count \times cell_max_voltage$

I_{cc} = configured charge current for the CC phase

I_{cv} = charge current during the CV phase

$cell_max_voltage$ = configured termination voltage for the selected chemistry(eg LiPo = 4.2V)

$cell_storage_voltage$ = configured per-cell storage voltage for the selected chemistry


$cell_discharge_voltage$ = configured per-cell storage voltage for the selected chemistry

I_{cv} = charge current during the CV phase

- ▶ Any time the battery's balance lead is connected the charger will monitor and display the cell voltages.
- ▶ The balancer is only active during a BALANCE charge(not during the CHARGE or FAST programs)
- ▶ The balance speed setting(Slow, Normal, Fast) controls the end-of-charging current threshold.
- ▶ The CHARGE and FAST modes are identical except for the charge-termination threshold which is 1/10 of the charge current setting for CHARGE and 1/5 of the charge current setting for FAST mode.
- ▶ While the CHARGE and FAST modes do not include any balancing action it is still safer to have the balance lead connected since then the charger will provide per-cell over-voltage protection as described below.
- ▶ In all kinds of charge cycle, if the balance lead is connected and if any cell exceeds the allowable per-cell peak voltage for the configured chemistry, the charge current will be reduced to ensure the voltage does not rise any further. This will slow the charging process and if the charge current falls to 1/10 of the charge current setting this will result in the charge cycle stopping altogether. Note that this is not the normal CC-to-CV transition which would usually occur when all cells approach the nominal peak voltage for the configured chemistry, but is a safety measure to respond to unbalanced cells in any mode or at any time during the charge process.

Charging Lithium battery in BALANCE mode

This function is for balancing the voltage of Lithium-polymer battery cells while charging. In the balance mode the battery balance lead must be connected to the balance port on the right side of the charger. The pinout of the balance port is shown in the diagram below. Charging in this mode is different from the normal CHARGE mode because the charger can monitor the voltage of individual cells and adjust the input current fed into each cell to normalize the voltage (for example: LiPo battery within 4.2V).

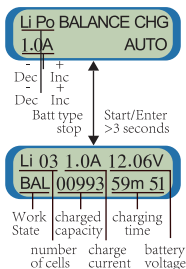


Balance charging mode of Lithium battery. The left side of the first line set the type of battery (LiPo, Lilo or LiFe). The value on the left side of second line sets the charge current and on the right side of second line, it shows AUTO. The system will check cell count automatically by cell balance port's voltage.

Charge current: 0.05 - 10A, Voltage: 1 - 6 series


Lithium BALANCE charging mode. The screen shows the status during the charging process. You can stop charging at any time by pressing **Batt type/Stop**. Press **Inc** ◀ to display each cell's voltage (see the balance voltage information) and press ▶ **Dec** to display the General Status Information.

Balance port and Individual Cell connection diagram

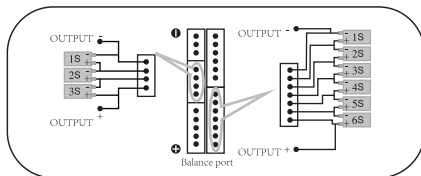

Charging a Lithium battery in normal CHARGE mode

The charger first charges with constant current(CC) according to the user setting then constant voltage(CV) when the charging voltage reaches the peak point. In the CV phase the current gradually falls. The charger will terminate charging when the current falls below than 1/10 of the configured charge current.

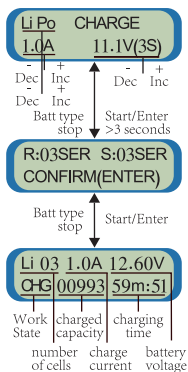

The left side of the first line set the type of battery(LiPo, Lilo or LiFe). The value on the left side of second line sets the charge current and the value on the right side of second line sets the cell count and voltage of the battery pack. After setting the current and voltage, press **Start/Enter** for more than 3 seconds to start the next process.


Charge current: 0.05 -10A, Voltage: 1 -6 series(LiFe to 8 series)

The number of cells you set and the processor detects. If the checking result is the same, it would enter to the next interface; if not the same, the left side of the first line 'R: × × SER' shows the number of cells detected by the charger and the right side of the first line 'S: × × SER' is the number of cells set by the user. Usually, the auto-detect number won't exceed the number set by the user. You should make sure that the configured number and the actual number for the battery are the same and then you can start charging by pressing **Start/Enter**. If not, press **Batt type/Stop** to go back to the previous screen and adjust the setting.

Lithium CHARGE mode. The screen shows the status during the charging process. You can stop charging at any time by pressing **Batt type/Stop**. Press **Inc** to display each cell's voltage (see the balance voltage information) and press **Dec** to display the General Status information.

Fast charging a Lithium battery

The charger first charges with constant current(CC) according to the user setting then constant voltage(CV) when the charging voltage reaches the peak point. In the CV phase the current gradually falls. The charger will terminate charging when the current falls below than 1/5 of the configured charge current. This will result in slightly less than 100% charge but will complete sooner than the Normal charge mode.

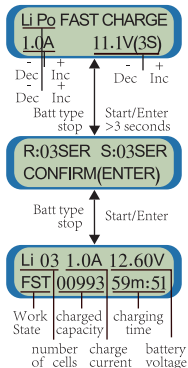

The fast charging mode of Lithium battery. The left side of the first line set the type of battery(LiPo, Lilo or LiFe). The value on the left side of second line sets the charge current and the value on the right side of second line sets the cell count and voltage of the battery pack. After setting the current and voltage, press **Start/Enter** for more than 3 seconds to start the next process.

Charge current: 0.05 -10A, Voltage: 1 -6 series(LiFe to 8 series)


The number of cells you set and the processor detects. If the checking result is the same, it would enter to the next interface; if not the same, the left side of the first line 'R: × × SER' shows the number of cells detected by the charger and the right side of the first line 'S: × × SER' is the number of cells set by the user. Usually, the auto-detect number won't exceed the number set by the user. You should make sure that the configured number and the actual number for the battery are the same and then you can start charging by pressing **Start/Enter**. If not, press **Batt type/Stop** to go back to the previous screen and adjust the setting.

Lithium FAST charging mode. The screen shows the status during the charging process. You can stop charging at any time by pressing **Batt type/Stop**. Press **Inc** to display each cell's voltage (see the balance voltage information) and press **Dec** to display the General Status information.

Pre-charging a Lithium battery

If the battery is over-discharged and the voltage is too low then in the Normal charge or Fast charge modes the charger will notify the user of pre-charging with a low current(100mA). This helps to increase the battery voltage to the within the allowable range for normal charging. The user can set the pre-charging time in the **Lithium Check time** screen in the

User setup.

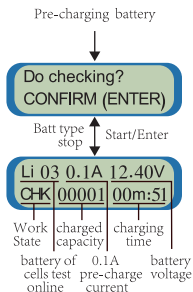


The following screen is displayed when the charger detects the battery voltage to be too low in the Normal charge or Fast charge modes.

Pre-charge lithium battery. Press **Start/Enter** to start the charging process or press **Stop** to go back to the previous screen.

Status display. The left side of the first line shows the type of battery(LiPo, Lilo or LiFe) and number of cells detected. In the middle is the pre-charge current(100mA). On the right is the voltage of the battery pack. The second line shows the charging progress with capacity charged(mAh) and charging time. The charger will switch back to the configured charge mode when the pre-charge time limit is reached. You can stop the pre-charging process at any time by pressing the **Batt type/Stop** button.

"Storage" charge/discharge a Lithium battery

This mode is for charging/discharging a Lithium battery that is not to be used for an extended period. The program determines whether to charge or discharge the battery based on the configured target voltage and the measured initial voltage of the battery. The nominal target storage voltage depends on the type of Lithium battery; 3.75V/cell for Lilo, 3.85V/cell for LiPo and 3.3V/cell for LiFe. If at the start the battery voltage exceeds the target storage voltage the program will start to discharge rather than charge.

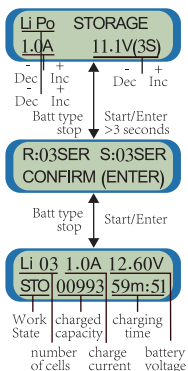

Storage of Lithium battery. The left side of the first line set the type of battery(LiPo, Lilo or LiFe). The value on the left side of second line sets the charge/discharge current and the value on the right side of second line sets the cell count and voltage of the battery pack. After setting the current and voltage, press **Start/Enter** for more than 3 seconds to start the next process.


Charge current: 0.05 -10A, Voltage: 1 -6 series

The number of cells you set and the processor detects. If the checking result is the same, it would enter to the next interface; if not the same, the left side of the first line 'R: × SER' shows the number of cells detected by the charger and the right side of the first line 'S: × SER' is the number of cells set by the user. You should make sure that the configured number and the actual number for the battery are the same and then you can start charging by pressing **Start/Enter**. If not, press **Batt type/Stop** to go back to the previous screen and adjust the setting.

Lithium STORAGE charging mode. The screen shows the status during the charging process. You can stop charging at any time by pressing **Batt type/Stop**. Press **Inc** ► to display each cell' s voltage (see the balance voltage information) and press ◀ **Dec** to display the General Status information.

Discharging a Lithium battery

In this mode, you can set the target per-cell voltage and hence the final voltage (final voltage=cell voltage*number of cells). The lowest allowable cell voltage depends on the type of Lithium battery; 2.50V for Lilo, 3.00V for LiPo and 2.00V for LiFe per cell. If the battery is connected to the balance port, the charger can monitor the individual cell voltages. The discharge will stop immediately if any cell falls below the configured final voltage.

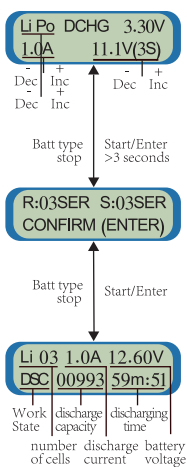

Discharge Lithium battery. The left side of the first line set the type of battery (LiPo, Lilo or LiFe) and the value on the right side shows the final discharge voltage of each cell. The value on the left side of second line sets the charge current and the value on the right side of second line sets the cell count and voltage of the battery pack. After setting the current and voltage, press Start/Enter for more than 3 seconds to start the next process. Per-cell final voltage: LiPo(3.00 -4.20V), Lilo(2.50 -4.10V), LiFe(2.00 -3.60V) Discharge current: 0.05 -7A, Cell count: 1 -6S

The number of cells you set and the processor detects. If the checking result is the same, it would enter to the next interface; if not the same, the left side of the first line 'R: × ×SER' shows the number of cells detected by the charger and the right side of the first line 'S: × ×SER' is the number of cells set by the user. Usually, the auto-detect number won't lower than the number set by the user. You should make sure that the configured number and the actual number for the battery are the same and then you can start charging by pressing **Start/Enter**. If not, press **Batt type/Stop** to go back to the previous screen and adjust the setting.


Discharge process. The charger allow its user to alter the discharging current during the process. Press **Start/Enter** to make the discharge current blink then press **Inc** to increase or press **Dec** to decrease the value and press **Start/Enter** to confirm the alteration. You can stop discharging at any time by pressing **Batt type/Stop**. Press **Inc** to display each cell's voltage (see the balance voltage information) and press **Dec** to display the General Status information.

Note: If you connect the balance port at the beginning of the discharging process, then the balance port will monitor each cell's voltage, if one of these cells' voltage reaches the termination voltage then the process will terminate with "balance port low cell vol". For example in LiPo mode, if one cell's voltage reaches 3.0V the process will stop.

If you want to avoid this "balance port low cell vol" message, then you can connect the balance port after the discharge process has started. In that case the process won't monitor each cell's voltage just the pack's voltage and the discharge process will terminate when the pack voltage reaches the termination voltage(=target_cell_voltage × number_of_cells). For example in LiPo mode, the discharge process won't terminate until the pack's voltage reach N*3.0V.

Lithium battery external expanding discharge mode

You can expand the charger's discharge power capacity by connecting the external capacity resistance. What should pay special attention is that, when expanding discharge, the balance port must connect to the battery and the expanding capacity resistance **R** should be series connected to the positive pole(See in the following diagram)



Li Po DCHG+ 3.30V
1.0A AUTO

Dec +
Inc +
Dec +
Inc

Batt type stop
Start/Enter >3 seconds

Li 03 1.0A 12.60V
DSC 00993 59m 51

Work State | discharge capacity | discharging time
number discharge battery
of cells current voltage

Discharge Lithium battery. The left side of the first line set the type of battery(LiPo, Lilo or LiFe) and the value on the right side shows the final discharge voltage of each cell. The value on the left side of second line sets the charge current and on the right side of second line, it shows AUTO. The system will check cell count automatically by cell balance port's voltage.

Per-cell final voltage: LiPo(3.00 -4.20V), Lilo(2.50 -4.10V), LiFe(2.00 -3.60V)
Discharge current: 0.05 -7A, Cell count: 1 -6S

Discharge process. The charger allow its user to alter the discharging current during the process. Press **Start/Enter** to make the discharge current blink then press **Inc** to increase or press **Dec** to decrease the value and press **Start/Enter** to confirm the alteration. You can stop discharging at any time by pressing **Batt type/Stop**. Press **Inc** to display each cell's voltage (see the balance voltage information) and press **Dec** to display the General Status information.

In this mode, the lithium battery discharges through charger and R, $P=P_c+P_r$, (P_c is charger's wasted power capacity; P_r is wasted power capacity by resistance). P_c is limited by the set charger's maximum discharge power capacity(<20W). But in the first 30 seconds of discharge startup, P_c can be reached 100W. This characteristic is tend to active some resistance loads which shows a remarkably increase in resistance value along with increase of the temperature, such as bulbs.

External capacity resistance's setting:

$$R = V_{bat} / I_{set};$$

$$P = V_{bat} * I_{set};$$

R: The value of the external capacity resistance


P: Rating capacity of the external capacity resistance

For example: discharge a pack of 20V lithium battery at 7A

$$R = 20V / 7A = 2.85 \Omega$$

$$P = 20V \times 7A = 140W$$

Charge-to-discharge & Discharge-to-charge cycle mode for a Lithium battery

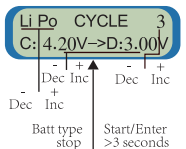


Charging/discharging cycle mode of Lithium battery.


The left side of the first line sets the type of battery(LiPo, Lilo or LiFe) and the right side shows the cycle number. The second line shows the cycle direction you selected: (C: X.XXV->D: X.XXV) or (D: X.XXV->C: X.XXV), the value of the second line sets the final charge/discharge voltage. Press **Start/Enter** button for more than 3 seconds with a sound "Di" to start the next process.

Cycle number: 1-10

Voltage: LiPo(3.00-4.20V), Lilo(2.50-4.10V), LiFe(2.00-3.60V)

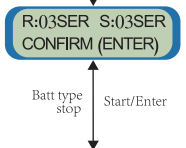

The number of cells you set and the processor detects. If the checking result is the same, it would enter to the next interface; if not the same, the left side of the first line 'R: X X SER' shows the number of cells detected by the charger and the right side of the first line 'S: X X SER' is the number of cells set by the user. You should make sure that the configured number and the actual number for the battery are the same and then you can start charging by pressing **Start/Enter**. If not, press **Batt type/Stop** to go back to the previous screen and adjust the setting.

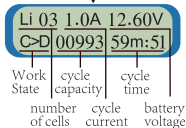


Charging/discharging cycle mode of Lithium battery.

In this process, you can stop the cycle at any time by pressing the Batt type/Stop button. In the process of C>D or D>c, the blink "C" indicate charging, while "D" indicates discharging. Press **Inc** button to display each cell's voltage and its past cycling current (see the balance voltage information& cycling information) and press **Dec** button to display the General Status information.

During the waiting time of discharge-to-charge cycle mode, you can stop the waiting process with pressing "Start" button for three seconds!

Lithium battery in monitoring mode


When you use other devices to charge or discharge Lithium pack, the charger can monitor each cell's voltage, battery temperature, charge time and so on, if one of the batteries appears over-charged, over-discharged, over-hot, over-capacity or over-time, the charger will alarm with noise "Di-..." and blink the related information.

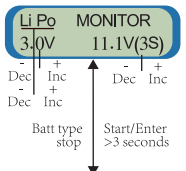

Monitor mode of Lithium battery. The left side of the first line sets the type of battery(LiPo, Lilo or LiFe). The value on the right side of the second line sets the low limit of voltage and the battery pack number. After setting the current and voltage press **Start/Enter** button for more than 3 seconds with a sound "Di" to start the next process.

Individual alarm low-Vt: final discharging voltage to the highest charging voltage(such as: LiPo 3.0V-4.2V),

Battery series: 1-6 series

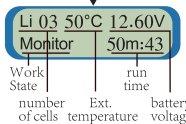


The monitor information, in this process; you can stop monitoring process at any time by pressing **Batt type/Stop** button.

Press **Inc** button to display each cell's voltage(see the balance voltage information), the charger will alarm with noise "Di..." when any errors appear.

Note: when in Li monitor Mode, no need connecting the main port if connecting the balance port.


NiCd/NiMH battery program

Charging a NiCd/NiMH battery

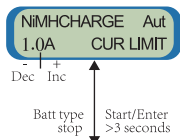


The left side of the first line displays the type of battery (NiCd/NiMH) and the second line allows you to set the current limit. The charger offers two charging modes for NiCd/NiMH, 'CHARGE Auto' and 'CHARGE Manual'. In 'Auto' mode the user sets the upper limit for the charging current. The charger will charge with about 1C automatically but no higher than the configured current. In 'Manual' mode it will charge at the configured current. Press **Start/Enter** for more than 3 seconds to start charging.

Current for Auto: 0.05 -10A; Current for Manual: 0.05 -10A

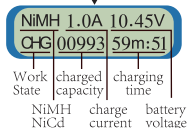

Charge status. You can stop the process at any time by pressing **Batt type/Stop**. Press **◀Dec** to display the General Status information.


Discharging a NiCd/NiMH battery



The left side of the first line shows the type of battery (NiCd/NiMH). The value in the second line sets the discharge current on the left and final voltage on the right. Press **Start/Enter** for more than 3 seconds to start discharging.


Discharge current: 0.05 -7A

Final voltage: 0.1 -29.0V

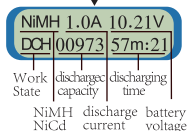


Discharge status. You can stop the process at any time by pressing **Batt type/Stop**. Press **◀Dec** to display the General Status information.

Charge-to-Discharge & Discharge-to-Charge cycle mode for a NiCd/NiMH battery

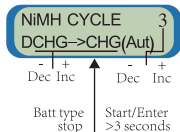

The left side of the first line shows the type of battery (NiCd/NiMH) and the right shows the cycle number. The second line shows the cycle direction you selected: (CHG (X X X)->DCHG) or (DCHG ->CHG (X X X)). You can set the charge modes as "Charge Auto" or "Charge Manual". The discharge parameters are those set in NiCd/NiMH discharge screen. Press **Start/Enter** for more than 3 seconds to start the cycling. Cycle number: 1 -10

Cycle charge mode: 'Aut' or 'Man'

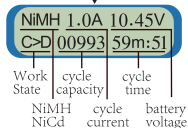

The screen displays the NiCd/NiMH cycle mode. On the left side of the second line, in the process is identified as either C>D or D>C. A blinking "C" indicates charging, while a blinking "D" indicates discharging.


You can stop the cycling process at any time by pressing **Batt type/Stop**. Press **Inc▶** to display the cycle history (see the balance voltage information & cyclic information) and press **◀Dec** to display the General Status information.

During the waiting time of discharge-to-charge cycle mode, you can stop the waiting process by pressing "start" button for three seconds!

NiCd/NiMH forming charge

This forming charge program aims to eliminate capacity imbalance between cells in a battery.

The charger first charges with constant current(CC=1C) according to the user setting. When the charging voltage reaches the peak threshold(1.48V/cell) it switches to the CV phase. In the CV phase the current gradually falls. When the current drops to C/4 the charger will charge another 25% Capacity at C/10 current and then terminate the process.

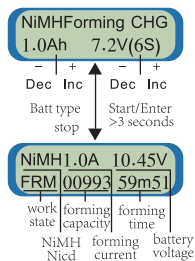

The left side of the first line shows the type of batter(NiCd/NiMH). The value on the left side of second line sets the cell capacity and the value on the right side of second line sets the cell count and nominal voltage of the battery pack. Press **Start/Enter** for more than 3 seconds to start charging.

Forming capacity: 0.1 -9.9Ah

Cell count: 1 -17S


Forming status. You can stop the process at any time by pressing **Batt type/Stop**, and display the General Status information by pressing **◀ Dec** button.

Note: In the first period(CV charging), it displays **"CHG" / "FRM"** alternately in Work State. It will display **"FRM"** when in the second period(CC charging).

Pb(lead-acid) battery program

This program is for charging Pb(lead-acid) batteries with nominal voltages from 2 to 36V. Lead-acid, VRLA or Gel batteries are totally different from NiCd or NiMH. They can only deliver relatively lower current compared to their capacity and charging can only be done at relatively low rates compared to other chemistries. The optimal charge current 0.1.C. Pb batteries must not be charged rapidly. Always follow the instructions supplied by the battery manufacturer.

Charging a Pb battery

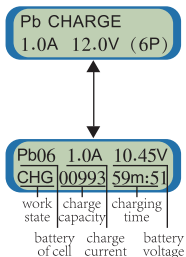


Charge Pb battery. The left side of the first line shows the type of battery(Pb). The second line shows the charge current and number of cells you selected. After setting the current and voltage press **Start/Enter** for more than 3 seconds to start the charging.

Charge current: 0.05 -10A
Battery cells: 1 -12P(2 -24V)

Status display. You can stop the charging process at any time by pressing **Batt type/Stop**. Press **◀Dec** to display the General Status information.

Note: the charger can support PB(lead-acid) foaming charge First, you should start the setting of “Trickle” in “NiMH/NiCd/Pb Trickle” .It won’ t foam charge until the voltage is less than 2.25V/cell.

Discharging a Pb battery

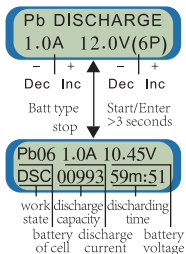

Discharging Pb battery. The left side of the first line shows the type of battery(Pb). The second line shows the charge current on the left and number of cells on the right. After setting the current and voltage press **Start/Enter** for more than 3 seconds to start the discharging.


Charge current: 0.05 -7A
Battery cells: 1 -12P(2 -24V)

Status display. Press **Start/Enter** to adjust the discharge current And press **Inc ▶** or **◀Dec** to increase or decrease the charge current. Store the new value by pressing **Start/Enter** again. You can stop the process at any time by pressing **Batt type/Stop**. Press **◀Dec** to display the General Status information.

Special modes program

Electric motor drive

You can easily break-in new **brushed** electric motors using a variable voltage and running time. **Note that the charger cannot directly drive brushless DC motors and that brushless motors to required or benefit from a breaking-in process.** With this function you also check the motor performance to optimize your power-train. The break-in process is essential for maximizing the power of a new brushed motor. New motors have square brushes which press up against the curved commutator. The goal for the break-in process is to gently shape the brushes so that they develop a curved surface that fits snugly against the commutator giving greater conducting surface area and hence lower losses and higher efficiency.

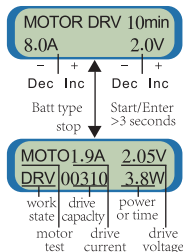


The value on the right side of the first line sets the test duration in minutes. The second line shows the upper limit of current on the left and drive voltage on the right. After setting the current and voltage press **Start/Enter** for more than 3 seconds to start the next process. A beep tone will sound.

Test time: 1 -90 min, Current: 0.05 -10A, Test voltage: 1 -15V

Status display. The top line shows the drive current and voltage. The second line shows the output capacity(mAh) and in the lower right corner alternately displays the output power or total run time. You can stop the test at any time by pressing **Batt type/Stop**.

Foam-Cut drive

In this mode, the charger acts as a convenient power supply for a hot wire foam cutter.

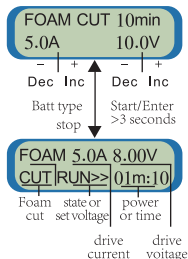


The value on the right side of the first line sets the run duration in minutes. The second line shows the upper limit of current on the left and foam cut voltage on the right. After setting the current and voltage press **Start/Enter** for more than 3 seconds to start the process. A beep tone will sound.

Running time: 0 -90min (0 refers to stopping the process by yourself)
Current: 0.05 -10A, voltage: 1 -25V

Status display. The top line shows the foam cut current and voltage. The second line shows the state and in the lower right corner alternately displays the output power or total run time. You can stop the test at any time by pressing **Batt type/Stop**.


Schematic Diagram

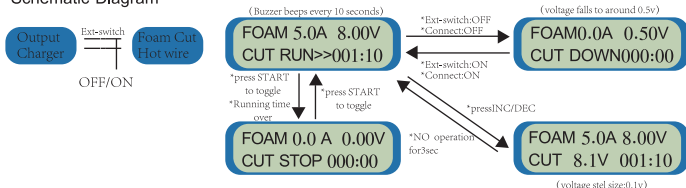

Measuring internal resistance of the battery

In general, the internal resistance of a battery is not a fixed value. It varies over time as the battery loses energy and also varies depending on the load, or how much current is drawn from the battery. One of the urgent requirements of a battery is low internal resistance. Measured in milliohms, the internal resistance is the gatekeeper that, to a large extent, determines the runtime. The lower the resistance, the less restriction the battery encounters in delivering the needed power spikes.

The charger can not only measure the internal resistance of the battery pack, and also can measure the per-cell internal resistance (only available for lithium battery).

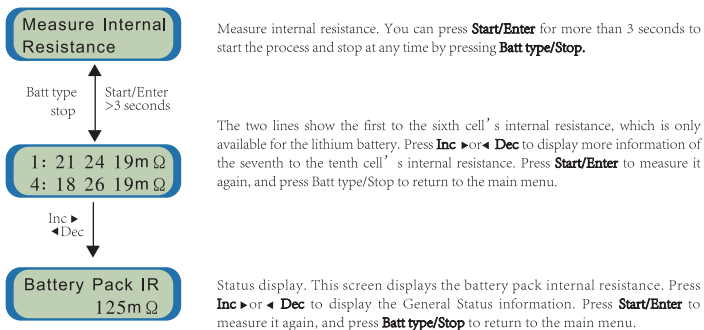


Note: You can check the internal resistance by Present testing information;

Data save/load program

The charger has a storage and load program for your convenience. This feature can store up to 10 battery datasets by number. Each dataset represent your settings for a particular set of batteries. Datasets can be reloaded for charging or discharging to save having to re-enter all the parameter values again by hand.

Data save program

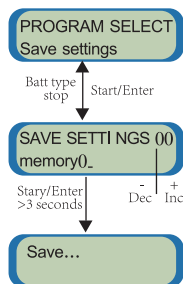


This screen displays the data save program. You can press **◀Dec & Start/Enter** button for 3 seconds to enter this interface directly.

In the first line, number "00" refers to the target memory number the user wants to choose. In the second line, the "memory0_" refers to the character the user wants to input. Press **Inc ▶/◀ Dec** button to walk letters, and then press **Start/Enter** button to confirm the chosen letter and moves to the next letter position, when you finish the character, press **Start/Enter** button twice to confirm the character. You can delete a wrong chosen letter by pressing **Batt type/Stop** button. Hold **Start/Enter** button for more than 3 seconds to save the currently displayed name. Hold **Batt type/Stop** button to exit without saving changes done.

Storage number: 00 -09

Storing all of the current data into the specified memory location.

Data load program

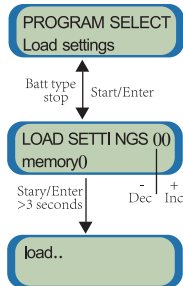

This screen displays the data load program. You can press **Inc & Start/Enter** button for 3 seconds to enter this interface directly.

In the second line, "memory0" refers to the source memory number the user wants to choose. Press **Start/Enter** for more than 3 seconds to start the process.

Memory location number: 00 -09

Loading all parameters values from the selected location.

Note: As for the "LOAD SETTING" program. You can load in any of the numbers you have saved in the "SAVE SETTING" from "00-09", for example, when you finish the last setting of

NiMH FORMING CHG

1.0Ah 7.2V (6S)


then you save it as 01 in the saving settings, and in the load setting, when you set "memory 01" and press "Start" button to load, and then the interface will display the

NiMH FORMING CHG

1.0Ah 7.2V (6S)

And use the current information directly.


General Status information

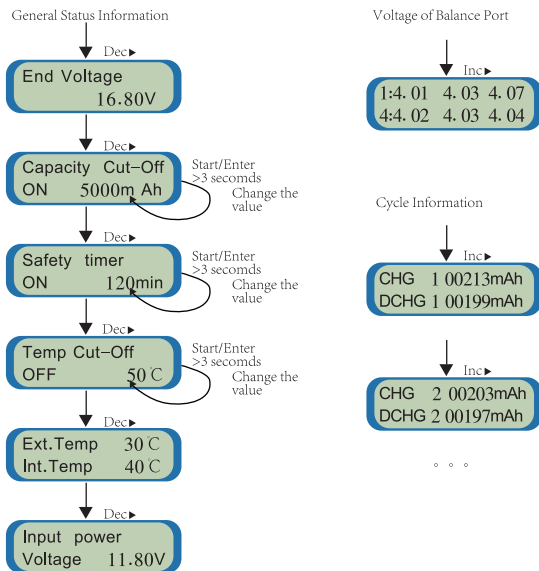

Note: Toggle back to the last viewed parameter via the **◀Dec** button, press **◀Dec** again to move the next parameter.

Warning and error information

The charger incorporates a wide range of protection and alarm functions to monitor the operation of the charger. This includes verifying the internal state and the condition of its electronics. In the case of any error being detected the screen displays the error cause and the charger generates 3 beeps. If the error occurs during a charging, discharging or cycling process the error message and termination data will appear alternately.



When an error has been reported press **Batt type/Stop** to return to the main menu. Press **Inc** or **◀Dec** to check the parameter value related to the error. For example in the case of a temperature error you can check the temperature that triggered the error. Press **Start/Enter** to return to the error message screen. Expression "—" refers to the discharged capacity to packs.

Error messages

REVERSE POLARITY
CHECK

The output is connected to a battery with incorrect polarity

CONNECT ON
BREAK DOWN

This will be displayed when an interruption of the connection between battery and the charger output has been detected during charging or discharging.

SHORT ERROR
BREAK DOWN

A short-circuit at output. Please check the charging leads.

INPUT VOLTAGE
LOW VOLTAGE

The input voltage is below the limit set in the USER SET menu.

INPUT VOLTAGE
OVER VOLTAGE

The input voltage is over the limit(32V).

BALANCE PORT
CELL LOWVOL

The voltage of one of the cells in the Lithium battery pack is too low.
Please check the cell voltages one by one.

BALANCE PORT
CELL HIGHVOL

The voltage of one of the cells in the Lithium battery pack is too high.
Please check the cell voltages one by one.

BATTNCE PORT
NOT CONNECT

In Balance charge mode, no battery is connected to the charger's balance port.

BATTERY CHECK
LOW VOLTAGE

Without using the balance port, the cell count detected by the charger is less than that set by the user.
Please check the cell count of the battery pack.

BATTERY CHECK
OVER VOLTAGE

Without using the balance port, the cell count detected by the charger is higher than that set by the user.
Please check the cell count of the battery pack.

Int.TEMP OVER
CHG STOPPED

The internal temperature is over 65 °C (149°F). Cool down the unit.

Ext.TEMP OVER
CHG STOPPED

The external temperature sensor detects (battery) temperature above the limit.

CAPACITY OVER
STOPPED

The capacity (mAh) charged or discharged reached the configured protection limit.

SAFETY TIME OUT
STOPPED

The charge or discharge time reached the configured protection limit.

Warranty

We warrant this product for a period of one year(12 months)from the date of purchase. The guarantee applies only to such material or operational defects,which are present at the time of purchasing the producr.During that period,we will repair or replace without service charge any product deemed defective due to those causes.You will be required to present proof of purchase (invoice or receipt).This warranty dose not cover the damage due to wear,overloading,incompetent handling or using of incorrect accessories.



This symbol means that you must dispose of electrical from the General household waste when it reaches the end of its useful life.

Take your charger to your local waste collection point or recycling centre. This applies to all countries of the European Union,and to other European countries with a separate waste collection system.



WARNING!



FIRE HAZARD!

NEVER USE CHARGER UNSUPERVISED!

Batteries pose a SEVER risk of fire if not propely handled.

Read Entire operation manual before using charger.

This unit may emit heat during use.

Only operate this device in a cool ventilated area away from flammable objects. Failure to observe safety procedures may cause damages to preoperty or injury.



MADE IN CHINA

